



MARSHALLTOWN
The Premier Line



Wheelbarrow Mixer Operations Manual

Part# MIX3, MIX3-UK
EDI# 27275, 27276

104 S. 8th Ave.
Marshalltown, IA
Phone 800-888-0127 / 641-753-0127
Fax 800-477-6341 / 641-753-6341
www.MARSHALLTOWN.com

INTRODUCTION

The Marshalltown Wheelbarrow mixer is great for the do-it-yourself home project. It allows you to work almost anywhere. The mixer will clear a 30" door and easily fits into an elevator. A sturdy 110-volt or 230-volt electric motor allows you to work indoors without emissions.

An included pedestal allows the mix to be discharged into wheelbarrows, buckets or between forms easily.

Used in the mixing of concrete, adhesives, chemicals, seed, and grain - there are many options.

- Mixes 3 Cu. Ft. of cement, mortar mix, or 7 bags of 60 lbs. concrete mix.
- High torque 1/2 HP single phase 110 volt/60 Hz (North America configuration) or 230 Volt/50 Hz (Europe/Asia/Africa/Australia configuration) electric motor with "On/Off" Switch
- Rugged steel drum
- Direct drive gearbox – easy to assemble, no belts or pulleys
- Fast mixing and easy clean up
- Lightweight – 110 lbs. (49.89 kg) – Can ship UPS
- Clears a 30 inch (76.20cm) door opening
- Spins at 28 RPM
- Drum diameter: 24" (61cm)
- Discharge outlet height: 18" (45.72cm)
- Wheel dimensions: 14" x 3.5" (35.50cm x 8.90cm)
- Storage dimensions: 45" x 29" x 35.5" (1.14m x 0.75m x 0.90m)

TABLE OF CONTENTS

Safety Precautions	3
Warranty	4
Assembly	5-15
Operation.....	16
Concrete Mixing Guide	17
Parts and Service Information	18

SIGNAL WORDS

UNDERSTAND SIGNAL WORDS

- A signal word - DANGER, WARNING, or CAUTION is used with the safety-alert symbol. DANGER identifies the most serious hazards.



- DANGER or WARNING safety signs are located near specific hazards.



- General precautions are listed on CAUTION safety signs.

SAFETY PRECAUTIONS



IMPORTANT—READ THIS MANUAL BEFORE ASSEMBLING OR OPERATING

After referring to the operation manual, if you still require assistance, please contact our customer service department.

CAUTION!

This operator's manual has been prepared to provide the information you need to correctly operate and maintain your unit. Read it carefully and keep it for future reference.

The replacement of any part on this product by other than the manufacturer's authorized replacement part may adversely affect the performance, durability or safety of this product. Should you ever require repair parts or service, contact your authorized parts and service dealer.

The manufacturer reserves the right to make changes or add improvements to its product at any time without prior notice. The manufacturer also reserves the right to decide, upon its discretion at any time, to discontinue a product.

Read and follow all safety precautions and operating instructions in this manual.

The following precautions are suggested to help prevent accidents. Before operating this equipment read all precautions. Only trained individuals should operate equipment. If the safety instructions and warnings are not read and carefully followed, personal injury could occur.

- Do not operate this mixer until all the warnings and safety instructions have been read and understood by the operator.



Keep all unauthorized and untrained people away from the mixer at all times.

- Wear safety glasses when mixer is in use.



Clear the work area around the machine to prevent tripping or falling onto the mixer.

- Operate on level ground to prevent the mixer from tipping over.
- Make sure that the mixing drum is clear of obstructions and stand clear of the mixer while making power cord connections.
- Properly grounded electric circuit is required to protect the operator from possible electric shock.
- Do not start the motor if the drum is fully loaded.
- DO NOT OPERATE this mixer under the influence of alcohol or while taking medication that impairs your reactions.
- Keep all people excluding the operator at least 5 feet away from the mixer during operation.
- NEVER run the mixer unattended, turn off the motor when you leave the machine.



Keep hands and clothing away from any moving parts while the mixer is running.



Never attempt to move the mixer while the motor is on.



NEVER plug or unplug the motor while standing in or around damp or wet ground.



Do not pull the cord to disconnect it. Keep the cord away from heat, oil, and sharp edges and in locations where it would not be easily tripped over.

- Keep the mixer clean and free of debris and aggregate build-up.
- Lightly grease wheel axles and the swivel bracket.
- Periodically examine the mixer for significant or abnormal damage/wear.
- Use factory authorized parts for replacement.

MIXERS ONE-YEAR WARRANTY

This product is warranted to the original purchaser only, to be free of defects in material and workmanship under normal use, for one year from purchase date. Marshalltown Company shall without charge for parts and labor, repair or replace such parts which are found to be defective. All transportation charges for replacement parts must be borne by the purchaser.

For warranty service, the product must be delivered, with proof of purchase date, to the dealer of original purchase, or any factory authorized service dealer. The delivery of the unit must be made no later than 30 days after the expiration of the warranty period.

If difficulty is encountered in having warranty work performed, contact the Customer Service Department.

All implied warranties, including those of merchantability and fitness for a particular purpose, are limited to one year from date of purchase by the original retail customer and to the extent permitted by law any and all implied warranties are excluded and disclaimed after the expiration of such period.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitations of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

Exclusion from this warranty:

1. The following items are not covered under the Marshalltown Company one year warranty and are warranted by their respective manufacturer.

a) Engines, including starters, generators, alternators and gear reducers.

b) Enclosed gear transmissions.

NOTE: A copy of the warranty and service contact information for the above items is furnished with the individual product.


2. All consequential damages, including pickup and delivery of the unit, communication, mileage charges and/or rental of a replacement unit during repairs are not covered under this warranty, nor are any loss of income and/or other loss resulting from the failure of the product to function due to a warranty defect.

3. This warranty will not apply when the product becomes inoperative due to misuse, normal wear, neglect, improper maintenance, accident or freight damage; has not been operated and maintained in accordance with the instructions furnished in the Operator's Manual; or has been altered or modified without approval from the factory Service Department.

4. No parts or products are to be returned to the factory without prior written approval from the factory.

ASSEMBLY GUIDE

1. Lay out the mixer parts.

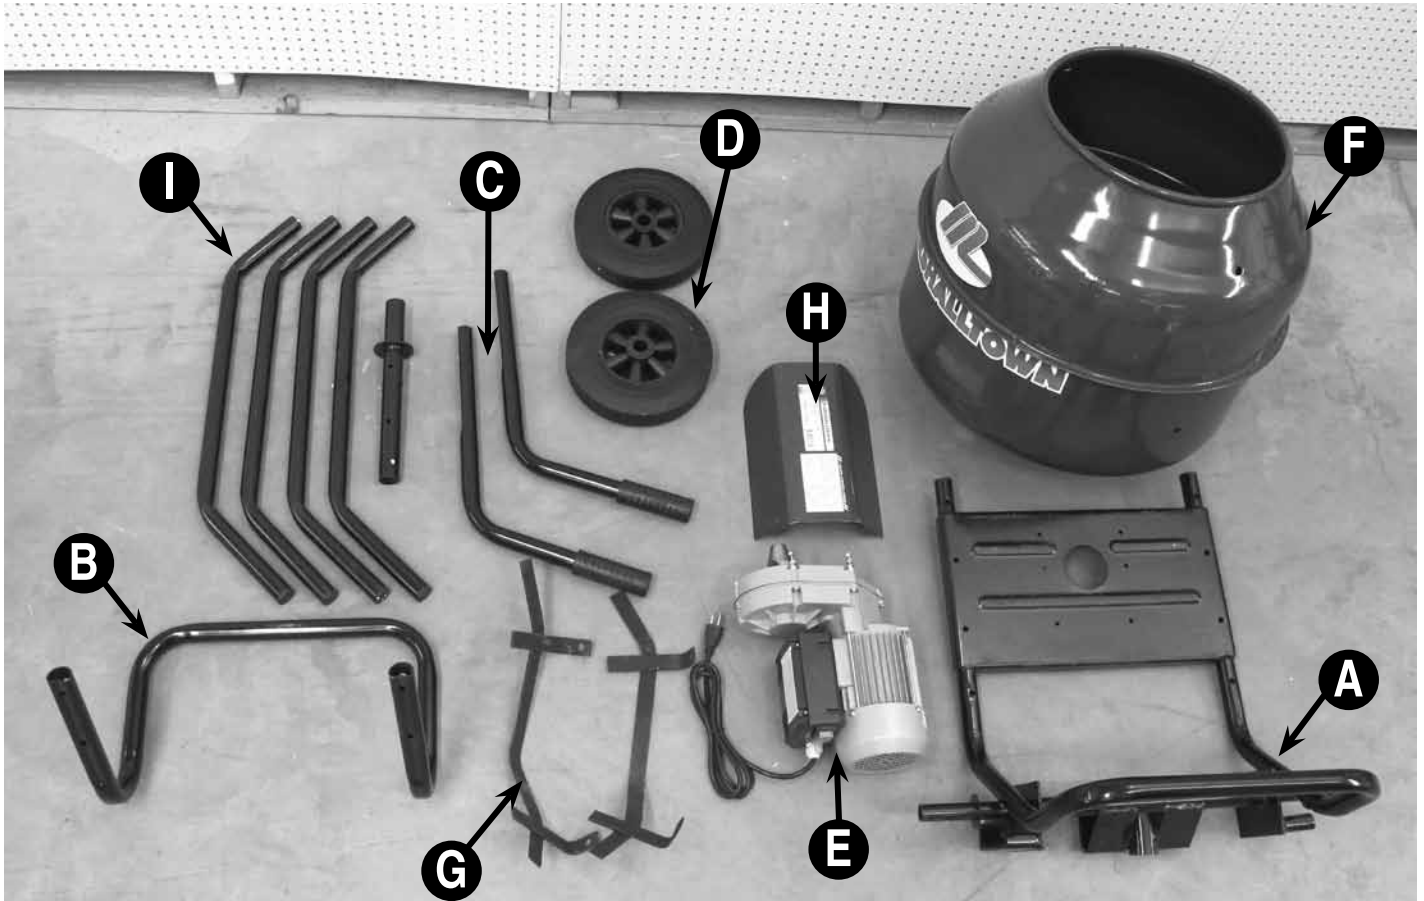

- | | | | | | |
|----------|---------------------|----------|---------------------------|----------|--------------------------|
| A | Chassis | D | Wheels (x2) | G | Paddles (x2) |
| B | Draw Bar | E | Direct-Drive Motor | H | Motor Hood |
| C | Handles (x2) | F | Drum | I | Pedestal Assembly |


PARTS AVAILABLE FOR REPLACEMENT

	NAME	PART#
E	Motor Assembly	MIX3MOTOR
E	Motor Assembly UK	MIX3MOTOR-UK
E	Motor Assembly France	MIX3MOTOR-F
F	Drum	MIX3DRUM
*	On/Off Switch	MIX3SWITCH
I	Pedestal	MIX3PEDESTAL
D	Wheel (single)	MIX3WHEEL
*	Gearbox	MIX3GEARS
G	Paddle (single)	MIX3BLADE

* Component of E

ASSEMBLY GUIDE

2. Lay out all hardware

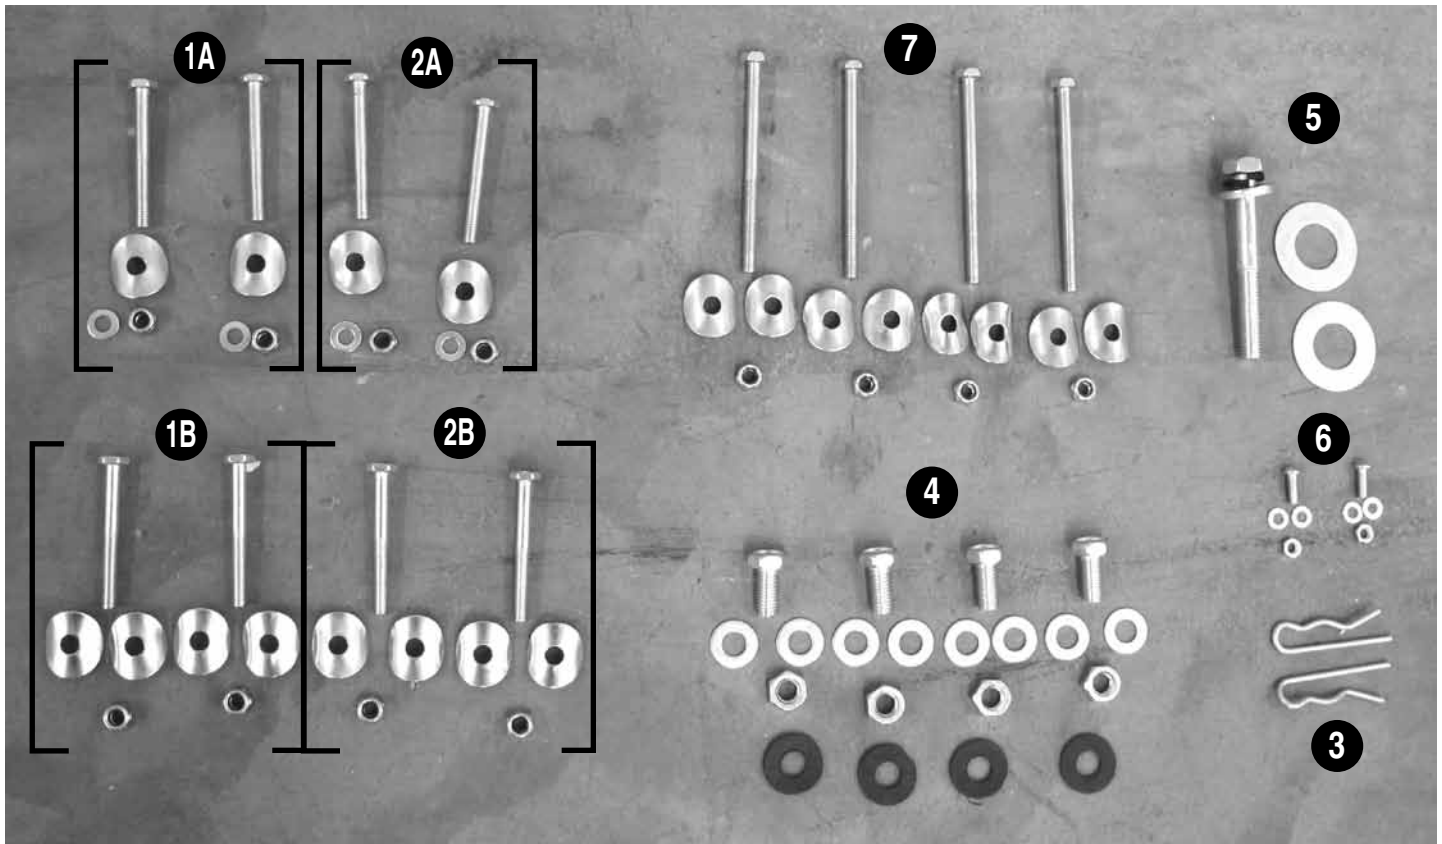

1A M8 x 70mm Hex Bolts (x2)
M8 Curved Washers (x2)
M8 Lock Nuts (x2)
M8 Washers (x2)

1B M8 x 70mm Hex Bolts (x2)
M8 Curved Washers (x4)
M8 Lock Nuts (x2)

2A M8 x 70mm Hex Bolts (x2)
M8 Curved Washers (x2)
M8 Lock Nuts (x2)
M8 Washers (x2)

2B M8 x 70mm Hex Bolts (x2)
M8 Curved Washers (x4)
M8 Lock Nuts (x2)

3 Cotter Pins (x2)

4 M12 x 25mm Hex Bolts (x4)
M12 Rubber Washers (x4)
M12 Washers (x8)
M12 Nuts (x4)

5 M14 x 108mm Hex Bolt
M14 Lock Washer
M14 Washer
14mm Washers (x2)

6 M6 x 40mm Machine Bolts (x2)
M6 Washers (x4)
M6 Lock Nuts (x2)

7 M8 x 105mm Hex Bolts (x4)
M8 Curved Washers (x8)
M8 Lock Nuts (x4)

ASSEMBLY GUIDE (Frame - Parts A & B)

3. Connect draw bar to the back of the drum frame. Hardware required: SETS 1A & 1B



Use hardware **1A** on top, use **1B** on bottom.



Fasten using a 14mm wrench and 14mm socket.



Finished frame.

ASSEMBLY GUIDE (Handle - Parts C)

4. Connect the handles to the drum frame. Hardware required: SETS 2A & 2B



Use hardware 2B on top, 2A on bottom.



Fasten using a 14mm wrench and 14mm socket.



Use hardware 2B on top, 2A on bottom.



Fasten using a 14mm wrench and 14mm socket.



Finished frame with handles.

ASSEMBLY GUIDE (Wheels - Parts D)

5. Connect wheels to the drum frame assembly. Hardware required: SET 3



Insert wheel and fasten with cotter pin. (Hardware 3)



Repeat step for other side.



Finished frame with wheels.

ASSEMBLY GUIDE (Attach Motor - Part E)

6. Mount engine on the drum frame assembly. **Hardware required:**(Hardware included on motor assembly)



Remove nuts and washers from motor studs.



Install with black box facing up.




Insert washers onto studs between nuts and frame, and fasten nuts using 10mm wrench and 10mm socket.



Finished frame with motor.

ASSEMBLY GUIDE (Drum Blades - Parts F & G)

7. Connect drum blades to drum interior. Hardware required: SET 4

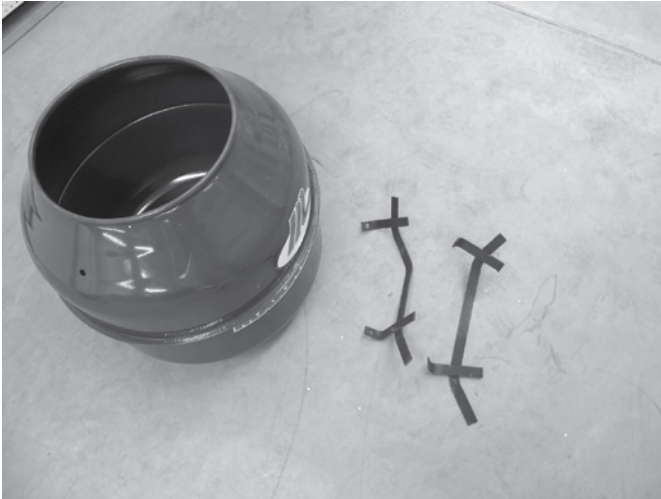

Insert bolts through drum.



Place rubber washers onto bolts.



Install paddles with short side facing outward, towards top of the drum.



Fasten using a 19mm wrench and 19mm socket.

ASSEMBLY GUIDE (Attach Drum)

8. Connect drum to output drive shaft (align drum over set screw) **Hardware required: SET 5**



Align set screw using a standard screwdriver, perpendicular to mixer frame. **See Inset A**




Assembly is easier with frame laying flat as shown.



Drum will saddle set screw and fit tightly on motor spindle.

Inset A

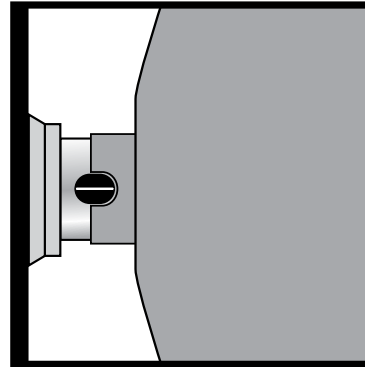

Two washers placed on bottom of drum, secured with bolt.



Use a 22mm socket to tighten drum to motor spindle.

ASSEMBLY GUIDE (Motor Hood - Part H)

9. Attach hood to drum frame assembly. Hardware required: SET 6



Put screws through mounting holes.



Mount to mixer frame.



Use a Phillips screwdriver and 10mm wrench to tighten.



Finished mixer.

ASSEMBLY GUIDE (Pedestal - Parts I)

10. Assemble Pedestal. Parts Hardware Required: SET 7



Put screws through corresponding mounting holes.



Attach two legs as shown. Note: Two legs have high mounting holes, and two have lower mounting holes.



Tighten hardware using a 14mm wrench and 14mm socket.



Attach remaining legs.



Tighten remaining hardware.



Finished pedestal.

ASSEMBLY GUIDE (Mixer to Pedestal)

11. Mount mixer to pedestal.



Lay mixer flat.



Lift mixer slightly and insert pedestal.



Grab mixer handles and carefully lift mixer into the upright position.



Completed mixer with pedestal.

OPERATION

GETTING READY FOR MIXING

Lay out forms for your concrete floor, patio, driveway, sidewalk, etc. The quality of concrete is directly related to the quality of the cement paste. The quality of the paste, in turn, is directly related to the amount of water mixed with the cement. For a given amount of cement, as the amount of mixing water is reduced, the strength of the paste increases, making the concrete stronger and more durable. Calculate the proportions of your mix components (cement, sand and coarse aggregate) according to the job specifications.

LOADING THE MIXER

Start the mixer. After drum has started rotating, pour about half of the water in the drum.

NOTE: The drum may leak slightly when first used. This will stop after a few batches. Add aggregate (gravel) first then cement and last sand. For mixing instructions, refer to the mixing guide on page 17.

UNLOADING THE MIXER

Allow the entire mixture to mix for one full minute. Do not stop mixer from rotating. Dump concrete to either side by tilting the handles in the direction required. Before reloading the mixer, slowly pour a pail of water over the lip of the drum, permitting water to clean the inside of drum. When cleaned, dump water. Now you are ready for your next batch.

CLEANING THE MIXER

After each run of concrete has been poured, do the following: With the drum rotating, spray water into drum allowing the water to run down the inside and outside of drum. Add one shovel full of coarse aggregate and permit this mixture to scour the inside of drum for about two minutes. This practice will help keep the drum clean, which is essential in obtaining the best mixing result. Never permit concrete to harden on either the inside or outside of drum.

EXTENSION CORDS-ELECTRIC MOTOR

The following size extension cords should be used for this mixer: length of cord, up to 100 ft -14 gauge wire; up to 200 ft -12 gauge wire; up to 300 ft -10 gauge wire; up to 400 ft - 8 gauge wire.

LUBRICATION & STORAGE

Lightly grease all moving parts – motor spindle, wheel axles and pedestal mounting shaft with SAE 30 engine oil.

For short term storage, clean the mixer and store in a dry place. If the mixer is not to be used for an extended period of time, service mixer completely and store it in a dry place. Cover exposed metal surfaces with a thin coat of SAE 30 engine oil.

CONCRETE MIXING GUIDE

Wheelbarrow Mixer - Model MIX3

Mixing pre-mix concrete:

Needed:

1-1/4 gallons of water

(1)x 80 lb bag of pre-mix concrete

1. Start Mixer
2. Put in 1 gallon of water, or as specified in concrete mix instructions
3. Add 1/2 of 80 lb bag of pre-mix concrete – mixture will be very sloppy
4. Slowly add 2nd half bag of concrete
5. Add 1/4 gallon of water slowly to obtain desired thickness, or as specified in concrete mix instructions

Mixing sand & gravel:

Needed:

Square point shovel

Portland cement

Gravel or round stone

Masonry sand

1. Start Mixer
2. Put in 1 gallon of water *
3. Add 3 shovels full of gravel or round stone
4. Add 1 shovel full of Portland cement
5. Add 2 shovels full of masonry sand – slowly
6. Add water to obtain desired thickness

* Amount of water will vary according to moisture content of sand and gravel.

PARTS AND SERVICE INFORMATION

For parts and service information, contact either your local dealer or MARSHALLTOWN Company:
104 S 8 Ave Marshalltown, IA 50158
Phone: (641) 753-0127
Fax: (641) 753-9227

When ordering parts, be sure to indicate the following information:

- Name of each part
- Complete part number
- Quantity of each part
- Model Name (Include all letters and numbers)
- Serial Number (Include all letters and numbers)

Parts Available for Replacement

	NAME	PART#
E	Motor Assembly	MIX3MOTOR
E	Motor Assembly UK	MIX3MOTOR-UK
E	Motor Assembly France	MIX3MOTOR-F
F	Drum	MIX3DRUM
*	On/Off Switch	MIX3SWITCH
I	Pedestal	MIX3PEDESTAL
D	Wheel (single)	MIX3WHEEL
*	Gearbox	MIX3GEARS
G	Paddle (single)	MIX3BLADE

* Component of E



MARSHALLTOWN
The Premier Line

104 S. 8th Ave.
Marshalltown, IA
Phone 800-888-0127 / 641-753-0127
Fax 800-477-6341 / 641-753-6341
www.MARSHALLTOWN.com