

ARDEX TLT™ Building Panels

Installation Guide for Walls

ARDEX TLT™ Building Panels can be installed over wood and metal studded walls horizontally or vertically by using the galvanized ARDEX TLT™ Screws & Washers. All vertical joints must be supported by suitable, load-bearing framing. Maximum spacing of studs is 16" on center.

STEP 1

Place ARDEX TLT™ Screws and Washers 12" apart vertically and 16" apart horizontally. It is best when applying the screws to create a slight depression in the board to reduce any buildup at the screw. Vertical seams must be staggered.

STEP 2

Seam Waterproofing - **Method 1 (ARDEX TLT™ Seam Tape)**

Cover all seams and screw/washer dents with the recommended ARDEX modified thin-set mortar and ARDEX TLT Seam Tape. Make sure all seams and screws/washers are fully covered with a minimum 2" overlap (approximately a 4.5" patch to cover washers). Use a grout float to remove any excess thin-set and air pockets.

Seam Waterproofing - **Method 2 (ARDEX CA 20 P™)**

Cover all seams and screw/washer dents with ARDEX CA 20 P™. Flatten the excess adhesive with a spackle knife. Make sure all seams are fully covered for a watertight seal.


For Steam Showers - **Method 3 (ARDEX TLT™ Waterproofing Membrane)**

ARDEX requires a layer of TLT Waterproofing Membrane to be installed over the TLT Building Panels.

STEP 1



STEP 2

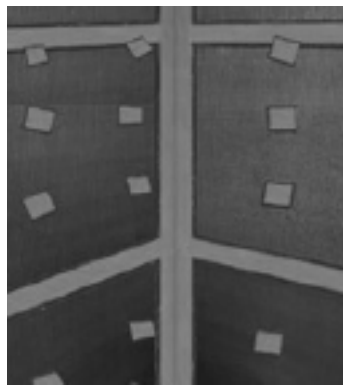

Method 1 (ARDEX TLT™ Seam Tape)



Method 2 (ARDEX CA 20 P™)



Method 3 (ARDEX TLT™ Waterproofing Membrane)



tile & stone
Installation Systems

www.ardexamericas.com

BUILT BY
YOU
backed by **ARDEX**