



**THE ORIGINAL**

AN ORIGINAL GRANITE BRACKET PRODUCT


**FLOATING CORNER SHOWER BENCH KIT®**



**1. Install blocking at desired height between pre-existing wall studs. Apply wall board according to manufacturer instructions.**



**2. Install brackets at the desired height using the provided hardware. Ensure they are level and securely attached.**

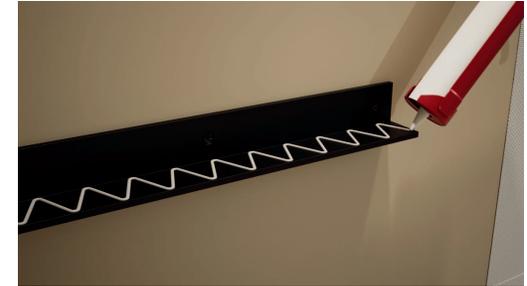


**3 Apply adhesive to the brackets, and then set the bottom board onto the brackets.**



**4. Apply adhesive to the bottom board.**



**5. Attach the top board to the bottom board.**

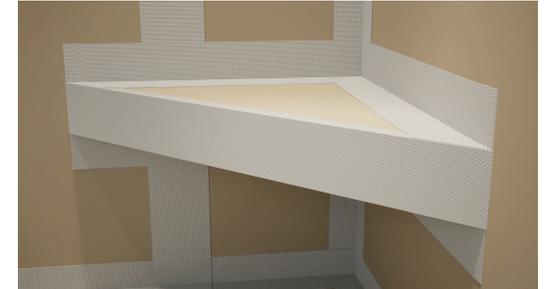

**6. Apply a layer of thin-set and wrap the exposed sides and brackets in provided tape.**



**7. Apply thin-set and your choice of finished product.**

floatingshowerbench.com



**Bench can be cut down to Customized Specifications.**