



EZ-NICHES® from *Alpinebay* is the solution to the costly and long process of building a recessed niche. The prefabricated design is ready to tile and can easily be installed in minutes.

Constructed from recycled ABS, this lightweight and durable material is virtually indestructible. A tiled shower niche creates an attractive shelf to place your shower necessities. In addition, the niche is often used as a design focal point for decorative tiles. Get creative and use multiple sizes.


FEATURES

- Easy and Quick Installation
- Ready for Tile
- Will **Not** Mold, Mildew, Rust or Leak
- Strong Bond with Polymer Modified Thin-set Mortar
- Install Vertically or Horizontally
- Adjustable Dividers/Shelf Available
- Fits Standard Wall Framing
- Limited Lifetime Warranty

EZ-NICHES® SIZE OPTIONS


Measurements: Width x Height x Depth

*Optional Adjustable Dividers for selected sizes
 **Arches Available: 14" x 22", and 14" x 14"

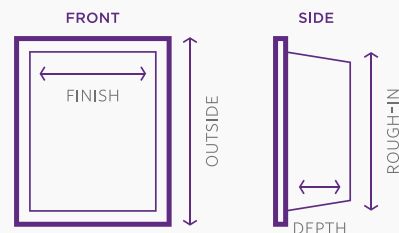

EZ-NICHES® SIZE OPTIONS (CONT.)

SEE INSTALL INSTRUCTIONS ON THE BACK

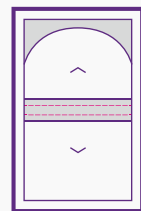

#LRN-ARCH

14" x 22" #LRN

LARGE RECTANGULAR NICHE

Rough-in: 14-1/4" x 22-1/4" x 3-3/4"

Finish: 14" x 22" x 3-5/8"

OPTIONAL DIVIDER(S)


(Thick) Inside: 14" x 1-3/4" x 3-5/8"

(Thin) Inside: 14" x 3/4" x 3-5/8"

(Glass) Inside: 14" x 1/2" x 3-5/8"

OPTIONAL ARCH

Inside: 14" x 7-1/2" x 3-5/8"



11" x 16" #MRN

MEDIUM RECTANGULAR NICHE


Rough-in: 11-1/2" x 16-1/2" x 3-3/4"

Finish: 11-1/4" x 16-1/4" x 3-5/8"

OPTIONAL DIVIDER(S)

(Thick) Inside: 11-1/4" x 1-3/4" x 3-5/8"

(Glass) Inside: 11" x 1/2" x 3-5/8"

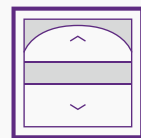

#LSN-ARCH

14" x 14" #LSN

LARGE SQUARE NICHE

Rough-in: 14" x 14" x 3-3/4"

Finish: 13-3/4" x 13-3/4" x 3-5/8"


OPTIONAL DIVIDER(S)

(Thick) Inside: 13-3/4" x 1-3/4" x 3-5/8"

(Glass) Inside: 14" x 1/2" x 3-5/8"

OPTIONAL ARCH

Inside: 13-3/4" x 6-1/2" x 3-5/8"



8" x 14" #SRN

SMALL RECTANGULAR NICHE

Rough-in: 8-1/4" x 13-3/4" x 3-3/4"

Finish: 8" x 13-1/2" x 3-5/8"

OPTIONAL DIVIDER

(Thick) Inside: 8" x 1-3/4" x 3-5/8"




7" x 8" #SN

SMALL NICHE/FOOTREST

Rough-in: 7" x 8-1/4" x 3-3/4"

Finish: 6-3/4" x 7-7/8" x 3-5/8"

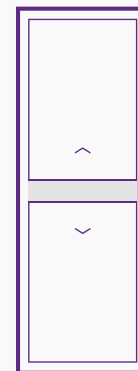

14" x 36" #EZ-XXLRN

EXTRA EXTRA LARGE RECTANGULAR NICHE

Rough-in: 14-1/2" x 36-1/4" x 3-3/4"

Finish: 14-1/4" x 36" x 3-5/8"

OPTIONAL DIVIDER(S)

(Thick) Inside: 14" x 1-3/4" x 3-5/8"

(Glass) Inside: 14" x 1/2" x 3-5/8"



16" x 32" #EZ-XLRN


EXTRA LARGE RECTANGULAR NICHE

Rough-in: 16-3/4" x 32-3/4" x 3-5/8"


Finish: 16-1/2" x 32-1/2" x 3-5/8"

ACCESSORIES

 THIN DIVIDER

 THICK DIVIDER

 GLASS DIVIDER

 FROSTED DIVIDER

 ARCHES





ALPINEBAY, INC.

1668 El Pinal Drive,
Stockton, CA
95205, USA

ez niches® info@ez-niches.com

HOURS

Weekdays
7 a.m. - 3 p.m. PST

**U.S. & CANADA
TOLL FREE**

+ 1 800 399 6088

PHONE

+ 1 209 462 1818

FAX

+ 1 209 462 8888

DISTRIBUTED BY:



For further information, or to find a dealer near you,
visit our website:

EZ-NICHES.COM | ALPINEBAY.COM

PATENTED D676,534

ALL YOU NEED TO INSTALL YOUR EZ-NICHES®


ADHESIVES

- Polymer Modified Thin-set Mortar
- Silicone Adhesive Caulking

Note: Follow manufacturing setting time for thin-set mortar. Allow longer setting time for larger size tile.


RECOMMENDED TOOLS

- Pencil/Markers
- Wall Trowels
- Screws
- Utility Saw/Knife
- Leveling Tool

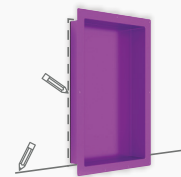

STEP 1

Trace the rough-in size around the entire niche. Allow an additional 1/8" to allow room for adjustments.

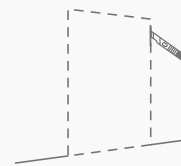


STEP 2

Cut out substrate from traced lines. Avoid cutting framing members, water lines, electrical wires, etc.



STEP 3

Place your niche into the cut out substrate to ensure fitting. Use a leveling tool to ensure correct alignment.

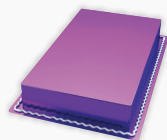


STEP 4

Apply a continuous bead of silicone adhesive caulking on the back of the mounting flange.



STEP 5

Secure your niche into the wall with fasteners.

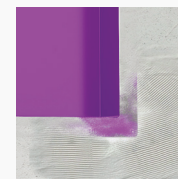


STEP 6

Skim a coat of polymer modified thin-set mortar around the edge of the niche to "feather" out the flange to the substrate.



STEP 7

Apply thin-set to the niche and back butter tile with polymer modified thin-set mortar to ensure full contact. Allow a longer setting time for tile to adhere to the surface.

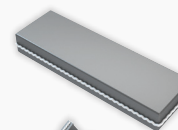

DIVIDER/SHELF & (LRN/MRN) ARCH INSTALLATION

Apply silicone adhesive caulking on the back of the divider/arch to adhere into place.



(LSN) ARCH INSTALL

Use a sharp cutting tool to score the excess edge of the arch and snap off the excess piece.



INSTALL NICHES IN MINUTES



EZ-NICHES.COM