




THE ORIGINAL  
GRANITE BRACKET

# FREE HANGING

S H E L F B R A C K E T

**The Free Hanging Shelf Bracket must be mounted directly into a wood wall stud.  
We recommend hitting each stud for maximum protection.**

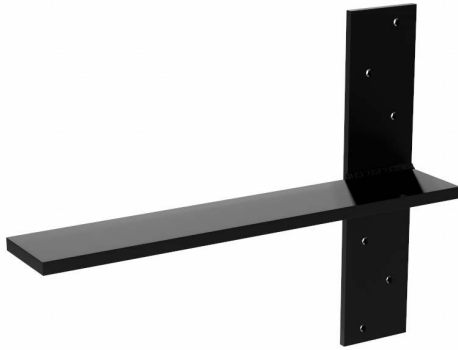

## THE ORIGINAL GRANITE BRACKET®

originalgranitebracket.com  
888-584-1112

### WATCH OUR INSTALLATION VIDEO

<https://originalgranitebracket.com/pages/installation-videos>

### SAFETY INSTRUCTIONS

- Use the correct tools.
- Wear safety goggles & proper safety equipment.
- Follow fixture, power tools & paint manufactures instructions & user manuals.
- Use common sense & follow good construction practices.
- Consult a professional when installing brackets for load bearing application.
- Be sure the bracket has a substructure that is able to support the bracket & any other additional weight that may be added to it.
- When in doubt, consult a professional installer.



## Installation Guide:

### Step #1:

Install Free Hanging Shelf Bracket directly into the wood wall stud using the appropriate wood screws.

**NOTE:** *We have provided screws HOWEVER make sure the length of the provided screws are appropriate for your project. If not appropriate DO NOT use the screws provided. Each project is different so protect your project by measuring before you add the screws*

**PRO TIP:** *(For larger brackets 16 inches or more in length, consider pitching them up 1/8 to 1/4 inch, especially when heavier materials will be used. This will help with the slight flex that could occur.)*

### Step #2:

Once the Free Hanging Shelf Brackets are installed, apply Sheetrock as usual, cutting around the bracket to leave the horizontal piece of the Free Hanging Shelf Bracket exposed.

### Step #3:

Place your countertop, desk top or mantel directly on the Free Hanging Shelf Bracket & caulk with clear silicone.

