




AN ORIGINAL GRANITE BRACKET PRODUCT
THE ORIGINAL FLOATING SHOWER BENCH KIT®
with GoBoard®



1. Install brackets at the desired height using the provided hardware. Ensure they are level and securely attached.



2. Install preferred backer board to manufacturer specifications.

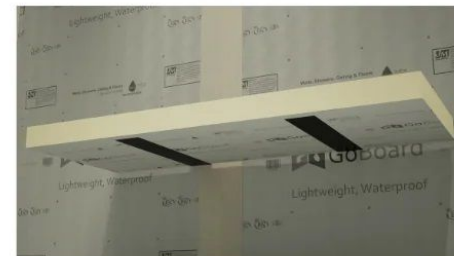

**3. Notch brackets into 1st board
Apply adhesive to the brackets.
Set the board onto the brackets.**



4. Apply adhesive to the first board.



5. Attach the second board to the first board.



6. Apply a layer of thin-set and wrap the exposed sides and brackets with provided Tape.



7. Apply thin-set and your choice of finished product.

floatingshowerbench.com

