

# **SMALL 50**

( 1106045 )

**EL**

**INTONACATRICE  
GUNITEUSE  
MORTAR MIXER  
VERPUTZMASCHINE  
ENFOSCADORA**

- I** Manuale uso manutenzione ricambi
- F** Manuel utilisation entretien pièces de rechange
- GB** Operating, maintenance, spare parts manual
- D** Handbuch für Bedienung, Wartung und Ersatzteile
- E** Manual de uso, mantenimiento y recambios




**IMER®**  
*INTERNATIONAL S.p.A.*

**IMER INTERNATIONAL S.p.A.**  
53036 POGGIBONSI (SIENA) loc. SALCETO  
(ITALY)  
tel. 0577 97341 - fax 0577 983304

**02/2006R1**  
- Cod. 3225890 -



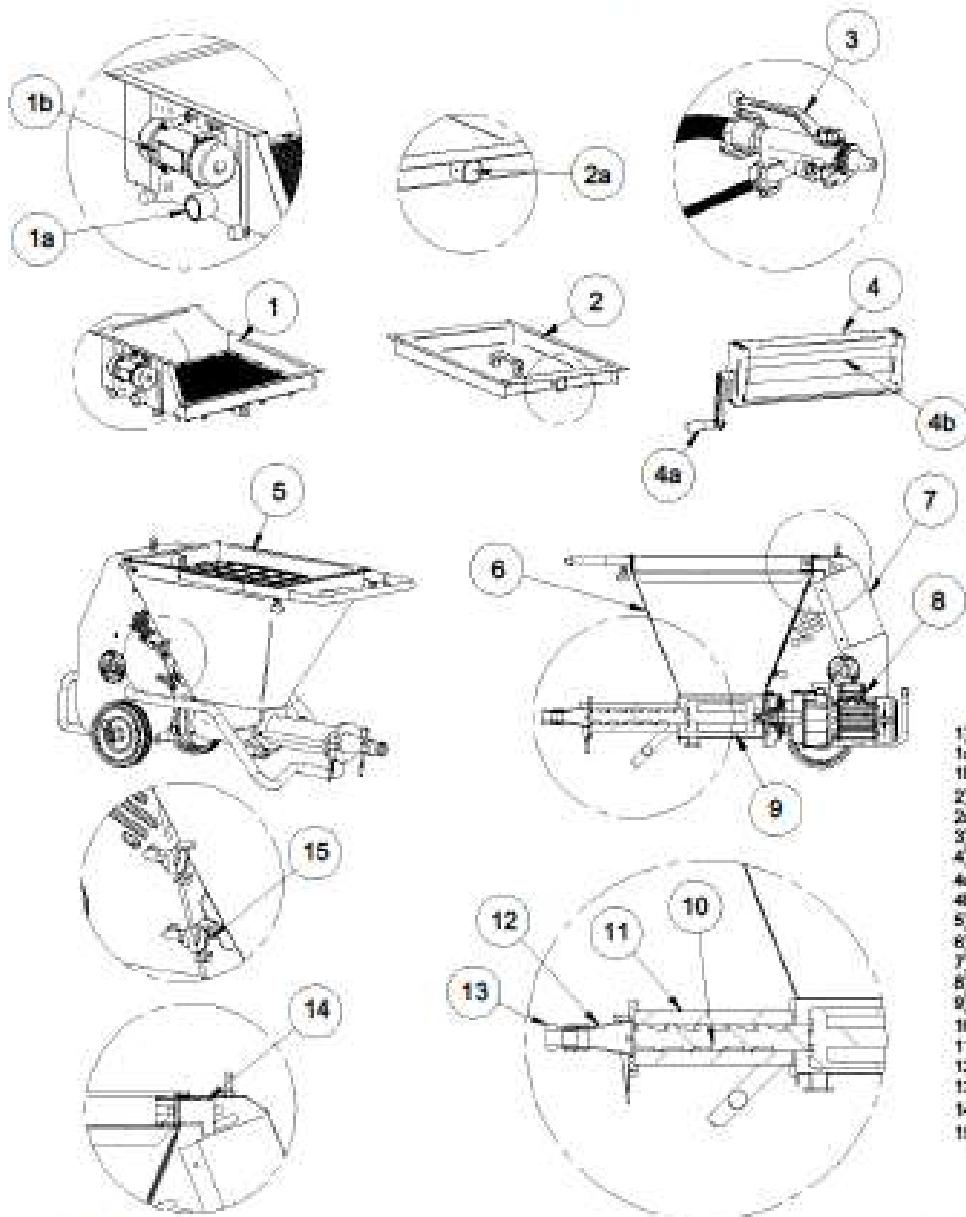

- 1) VIBROSETACCIO
- 1a) SENSORE VIBRO
- 1b) VIBRATORE
- 2) COPERTURATRAMOGGIA
- 2a) SENSORE COPERTURA
- 3) LANCIA SPRUZZATRICE
- 4) SCHIACCIASACCHI
- 4a) MANOVELLA
- 4b) RULLO
- 5) GRIGLIA TRAMOGGIA
- 6) TRAMOGGIA
- 7) QUADRO ELETTRICO
- 8) MOTORREDUTTORE
- 9) AGITATORE
- 10) ROTORE - VITE ECCENTRICA
- 11) STATORE - VITE ECCENTRICA
- 12) TUBO USCITA MATERIALE
- 13) ATTACCO A CAMME
- 14) SENSORE MACCHINA
- 15) ATTACCHI ARIA

**ENGLISH**

- 1) VIBRATING SCREEN
- 1a) VIBRO SENSOR
- 1b) VIBRATOR
- 2) HOPPER COVER
- 2a) COVER SENSOR
- 3) SPRAY JET
- 4) BAG SPLITTER
- 4a) HANDLE
- 4b) ROLLER
- 5) HOPPER GRID
- 6) HOPPER
- 7) ELECTRICAL PANEL
- 8) GEARMOTOR
- 9) MIXER
- 10) ROTOR - CAM SCREW-
- 11) STATOR - CAM SCREW -
- 12) MATERIAL OUTFEED HOSE
- 13) CAM COUPLING
- 14) MACHINE SENSOR
- 15) AIR CONNECTIONS

**FRANÇAIS**

- 1) TAMIS VIBRANT
- 1a) CAPTEUR VIBRO
- 1b) VIBRATEUR
- 2) COUVERCLE TREMIE
- 2a) CAPTEUR COUVERCLE
- 3) LANCE DE VAPORISATION
- 4) ECRASE-SACS
- 4a) MANIVELLE
- 4b) ROULEAU
- 5) GRILLE TREMIE
- 6) TREMIE
- 7) TABLEAU ELECTRIQUE
- 8) MOTOREDUCTEUR
- 9) AGITATEUR
- 10) ROTOR - VIS EXCENTRIQUE -
- 11) STATORE - VIS EXCENTRIQUE -
- 12) TUBE SORTIE MATERIAU
- 13) FIXATION A CAMES
- 14) CAPTEUR MACHINE
- 15) RACCORDS AIR

**DEUTSCH**

- 1) RÖTTELSEB
- 1a) SENSOR RÖTTLER
- 1b) RÖTTLER
- 2) TRICHTERDECKEL
- 2a) SENSOR DECKEL
- 3) SPRÜHPISTOLE
- 4) SACKPRESSE
- 4a) KURBEL
- 4b) WALZE
- 5) TRICHTERGITTER
- 6) TRICHTER
- 7) SCHALTTAPEL
- 8) GETRIEBEMOTOR
- 9) RUHRWERK
- 10) ROTOR - EXZENTERSCHNECKE -
- 11) STATOR - EXZENTERSCHNECKE -
- 12) MATERIALAUSTRITTSSROHR
- 13) NOCKENANSCHLUSS
- 14) SENSOR MASCHINE
- 15) DRUCKLUFTANSCHLÜSSE

**ESPAÑOL**

- 1) VIBROTAMIZ
- 1a) SENSOR VIBROTAMIZ
- 1b) VIBRADOR
- 2) TAPA DE LA TOLVA
- 2a) SENSOR TAPA
- 3) PISTOLA DE PROYECCIÓN
- 4) PRENSA DE SACOS
- 4a) MANIVELA
- 4b) RODILLO
- 5) REJILLA DE LA TOLVA
- 6) TOLVA
- 7) CUADRO ELÉCTRICO
- 8) MOTORREDUCTOR
- 9) AGITADOR
- 10) ROTOR - TORNILLO EXCÉNTRICO -
- 11) ESTATOR - TORNILLO EXCÉNTRICO -
- 12) TUBO SALIDA MATERIAL
- 13) RACOR TIPO CAMLOCK
- 14) SENSOR MÁQUINA
- 15) CONEXIONES DE AIRE

Particolare attenzione deve essere fatta alle avvertenze contrassegnate con questo simbolo:

Il faut prêter une attention toute particulière aux notes précédées de ce symbole :

Special attention must be given to warnings with this symbol:

Lesen Sie die mit diesem Symbol bezeichneten Abschnitte mit besonderer Aufmerksamkeit:

Se tiene que prestar una atención especial a las indicaciones marcadas con el signo:





TABELLA - TABLEAU - TABLE - TABELLE - TABLA 1

I	F	GS	D	E	SMALL 50	
DATI TECHNICI	DONNEES TECHNIQUES	TECHNICAL DATA	TECHNISCHE DATEN	DATO TECNICOS		
Codice macchina	Code machine	Machine code	Maschinencode	Código de la máquina	116646 (115V / 60 Hz)	
ALIMENTAZIONE PRINCIPALE	ALIMENTATION PRINCIPALE	MAIN POWER SUPPLY	HAUPTSTROMVOORLICHTING	ALIMENTACION PRINCIPAL	V	115
ALIMENTAZIONE COMANDO	ALIMENTATION COMMANDE	COMMAND POWER SUPPLY	STROOMVOORLICHTING BEHEERLEMENT	ALIMENTACIÓN DE LOS MANDOS	V	24
COLLEGAMENTO ELETTRICO FRESE (phasore) / CABLE (PHASE A 30A)	BRANCHEMENT ELECTRIQUE FRESE (PHASORE) CABLE (JUSQU'A 30A)	ELECTRICAL CONNECTOR CONNECTEUR (PHASE) CABLE (UP TO 30A)	STROMVERKLEIDUNG STECKDOSSE (EINPHASIGE FRESE) (0-30A)	CONEXIÓN ELÉCTRICA TIPO (FASE) / CABLE (HASTA 30A)	V	115 mm 302.5
GRUPPO ELETROGENO MOTORREDOVISORE (MMR)	GROUP ELECTROGÉNE MOTORRED	GENERATOR SET MOTORRED	GENERATOR (MMR)	GRUPO ELECTROGENO MOTORRED	kVA	6
MOTORIZZAZIONE POWER 115V/60Hz	MOTORREDUCTEUR	GEARMOTOR	GETRIEBEMOTOR	MOTORREDUCTEUR DEL	kW	1.5
CORRENTE MM (Amp)					A	15
TENSIONE PRESEZIONATA MM OPTIONAL (MMR)	CHIUSURA PRESIDIATA COMPRESSORE (MMR)	COMPRESSOR PRESSURE SWITCH SETTING (MMR)	SOCHIUNO DI PRESIDIATO COMPRESSOR (MMR)	CLASIFICACIÓN DEL PRESIDIADO DEL COMPRESOR (MMR)	Bar	30.2
COMPRESSORE AMBIENTALE (OPTIONAL)	COMPRESSOR	COMPRESSOR	COMPRESSOR	COMPRESSOR	kW	0.55
PRESSA VALVOLA DI SICUREZZA COMPRESSORE	STALVINDAS SOUPAPE DE SECURITE	COMPRESSOR SAFETY VALVE SETTINGS	SOCHUNO COMPRESOR SEGURIDAD DEL COMPRESOR	CLASIFICACIÓN DE LA VALVULA DE SEGURIDAD DEL COMPRESOR	Bar	4
PORTATA INIZIALE CON POMPA DS-1.5 (max)	DEBITO (SALVAVACUUM POMPA DS-1.5 (max))	INITIAL FLOW RATE WITH PUMP DS-1.5(max))	MOTOR DORSALITO DS-1.5 PUMPS DS-1.5(max)	DEBITO DEL MATERIAL CON SISTEMA DS-1.5(MAX.)	l/min	0.5-14
PRESA MAXIMA	PRESSION MAXIMUM	MAXIMUM PRESSURE	HOCHSTDRUCK	PRESIÓN MAXIMA	Bar	15
MAGNA DISTANZA DI POMPAGE (*)	DISTANCE DE POMPAGE MAXIMUM (*)	MAXIMUM PUMPING DISTANCE (*)	MAX. PUMPE-DISTANZ (*)	MÁXIMA DISTANCIA DE SOMBRA (*)	m	15
TUBO DA 15mm	TUBE Ø15mm	HOSE Ø15mm	SCHLAUCH DURCHM. 15mm	TUBO Ø15mm	m	25
TUBO DA 25mm	TUBE Ø25mm	HOSE Ø25mm	SCHLAUCH DURCHM. 25mm	TUBO Ø25mm		
DIMENSIONI	DIMENSIONS	GRÖSSEN	GRÖSSEN	DIMENSIONES	mm	1120
X	X	Ø	Ø	X	mm	520
Y	Y	Ø	Ø	Y	mm	650
Z	Z	Ø	Ø	Z	mm	
ALTEZA DI CARICO	HAUTEUR CHARGEMENT	LOADING HEIGHT	AUFLAGE	ALTURA DE CARGA	mm	650
CAPACITÀ TUBAZZINA	CAPACITÉ TUBAZZINA	HOPPER CAPACITY	REICHWEITEN	CAPACIDAD DE LA TUBA	l	50
PESO	POIDS	WEIGHT	GEWICHT	PESO	kg	65
LIVELLO SERVIZIO: ISO9001 LVA-1M-9021/CE LVA-EN ISO9001 (2000)VDE	NIVEAU SERVIZIO: ISO9001 LVA-1M-9021/CE LVA-EN ISO9001 (2000)VDE	ISO9001 QUALITY LEVEL LVA-1M-9021/CE LVA-EN ISO9001 (2000)VDE	QUALITÄTSSTANDART LVA-1M-9021/CE LVA-EN ISO9001 (2000)VDE	ESTANDAR: ISO9001 LVA-1M-9021/CE LVA-EN ISO9001 (2000)VDE	dS(A)	<74 83
Norme di progetto	NORMES DE FABRICATION	DESIGN STANDARDS	PROJEKTSTANDART	NORMAS DE PROYECTO	EN 12100-10 EN 60204-1 EN 12001	

(\*) NOTA: L'ADMISSIONE DI POMPAGE È SOSSERVATA A SEGLI VARIABILI, QUESTI POSSONO RISULTARE: IL TIPO DI MATERIALE USATO, ALTAZUA SERVIZIO, CONSIDERAZIONE DEL MATERIALE, TIPO DI POMPA (MSP/ROTOR).

(\*\*) REMARQUE : LA CONDUITE DE POMPAGE EST SUJETTE A VARIATIONS, QUICHES POURRAIENT CONCERNER : LE TYPE DE MATERIALE UTILISE, LA HAUTEUR SERVIZIO, LA CONSIDERANCE DU MATERIALE, LE TYPE DE POMPE (MSP+ROTOR).

(\*\*) NOTE: LAS RESISTENCIAS MAXIMAS DEBEN DEPENDER DE VARIOS FACTORES, COMO, POR EJEMPLO, EL TIPO DE MATERIAL USADO, LA ALTURA SERVICIO, LA CONSIDERACION DEL MATERIAL Y EL TIPO DE BOMBA (MSP+ROTOR).

(\*\*) NOTA: LA DISTANZA DE SUMINISTRO DEPENDE DE VARIOS FACTORES, COMO, POR EJEMPLO, EL TIPO DE MATERIAL USADO, LA ALTURA SERVICIO, LA CONSIDERACION DEL MATERIAL Y EL TIPO DE BOMBA (TORNILLO+ROTOR).

Dear Customer;

compliments on your purchase: this IMER mortar mixer, the result of long-standing experience in the field, features maximum reliability and innovative technical solutions..

#### - WORKING IN SAFETY:

To ensure complete safety, read all the instructions in this manual carefully.

This OPERATION AND MAINTENANCE manual must be kept by the Site Manager and be always available for consultation.

The manual is considered part of the machine and must be stored for future reference ( EN 12100-2 ) through to scrapping of the machine itself. If the manual is lost or damaged, a replacement copy can be ordered from the manufacturer.

The manual contains the EC declaration of conformity (88/37/EC) Important information on construction site procedures, installation, operation, maintenance and requests for spare parts. Nevertheless, the user must both have adequate experience and knowledge of the machine prior to use: the user should be trained by a person totally familiar with the operation and use of this machine.

To guarantee complete safety of the operator, safe operation and long life of equipment, follow the instructions in this manual carefully, and observe all safety standards currently in force for the prevention of accidents at work (use of safety footwear and suitable clothing, helmets, gloves, goggles etc.).

#### - Make sure that all signs are legible.

#### - Never make any modifications to the metal structure or mortar mixer systems.

IMER INTERNATIONAL accepts no responsibility in the event of failure to comply with laws governing the use of this type of equipment, with particular reference to: improper use, incorrect power supply, lack of maintenance, unauthorised modifications, failure to comply, either wholly or partially, with the instructions set out in this manual.

IMER INTERNATIONAL reserves the right to modify the characteristics of the mortar mixer and/or contents of this manual, without the obligation to update the previous machine and/or manuals.

## 1. TECHNICAL DATA

Table 1 provides the technical specifications of the mortar mixer, with reference to figure 1.

## 2. DESIGN STANDARDS

The mortar mixers have been designed and constructed according to the standards specified in table 1.

## 3. NOISE EMISSION LEVEL

Table 1 shows the sound pressure levels of the mortar mixer measured at the ear of the operator ( $L_{WA}$  at 1 m - 88/37/CE) and noise emission levels in the environment (power  $L_{WA}$ ) measured according to EN ISO 3744 (2000/14/CE).

## 4. DESCRIPTION OF MORTAR MIXER OPERATION

 - THE CAM SCREW mortar mixer is designed for use in building sites, for pumping, injecting or spraying all wet or pre-mixed materials, compatible with this type of machinery: liquid cement, adhesives, finishing products, levelling products, waterproofing, finishing colours, grouting, traditional mortars or pre-mixed products, plasters with a lime/cement base or gypsum, fire-proof insulants etc.

### 4.1 DESCRIPTION OF MORTAR MIXER (see fig.1)

The mortar mixer comprises a wheeled frame (ref. N), which supports a hopper (ref. 6) with grid (ref. 5), an electrical panel (ref.7), a gearmotor (ref. 8), which, by means of a mixer (ref. 9) activates a cam screw pump (ref. 10/11) that conveys the material via a rubber hose to the jet (ref. 3).

If the material is sprayed, air is also delivered to the jet by means of a compressor (optional).

The mortar mixer can be controlled by means of: pneumatic control, electrical via cable (radio control optional).

The flow rate is controlled by means of the buttons (+) and (-) on the control panel.

The flow rate is shown (0=min, 100=max) on the electrical panel display. The mortar mixer can be combined with various

accessories, as described in paragraph 4.2.

## 4.2 DESCRIPTION OF MAIN ACCESSORIES REQUIRED FOR THE RANGE OF APPLICATIONS

SMALL 50 is undoubtedly the smallest and most versatile pump available. There are manifold applications in which this pump represents the ideal solution in terms of operation and speed. By the simple addition or replacement of an accessory, SMALL 50 can be adapted to diverse requirements. For this reason, it is important to be aware of the wide range of accessories available, to enable full exploitation of the potential of this machine. IMER INTERNATIONAL is available, through their dealers and authorised service centres to evaluate your requirements and find the ideal solution.

Commonly used optional accessories (see fig.1):

### - IMER VIBRO - SCREEN code no. 1107548

 - This accessory replaces the hopper grid and is therefore equipped with a safety sensor.

It must be used when the material is to be mixed on site with collection of aggregate from a loose storage deposit: In this case some aggregate may have a larger particle size than admissible values, which could obstruct the spray outlet or cause premature wear of the stator. After removing the hopper grid (ref.5), position the screen on the hopper (ref. 6) and make the electrical connection with the machine's electrical panel (fig.5, ref. 12), fitted with the vibrator on/off control.

Operation: after positioning and connecting the machine, and before pouring the material into the hopper, set the main switch to ON to start up the vibrator. Pour in the required material and on completion turn the switch to OFF, removing any residue trapped in the screen.

### - HOPPER COVER (see fig.2)

IMER code no. 1107513

 - This accessory replaces the hopper grid and is therefore equipped with a safety sensor.

It is used to close the hopper and isolate the contents from air and possible impurities; finishing colour, finishing mortar etc. This delays drying of the materials thus enabling prolonged storage time in the hopper.

Position at the top of the hopper (ref. 5) with or without the hopper grid (ref. 6).

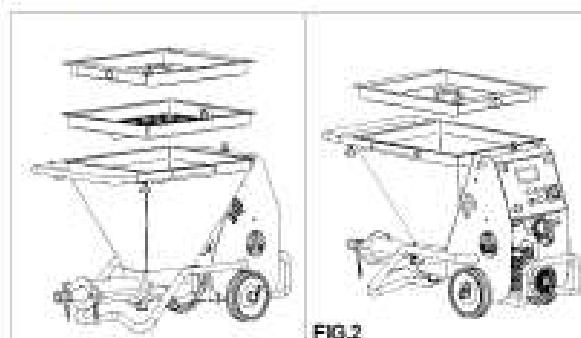


FIG.2

### - IMER BAG SPLITTER code no. 1107511

It is used to speed up and optimise emptying of the bags containing the wet material ready to use (e.g. the most common lime-based finishing mortar).

It features simple connection to the machine. If necessary the roller crushing pressure can be adjusted as required: loosen the screws to reduce and tighten to increase.

Intuitive operation: lay out a bag of material lengthwise on the hopper grid, move the protruding flap of the sack towards the rollers (ref. 4b), use the right hand to slightly turn the rollers clockwise by means of the handwheel (ref. 4a), so that the bag is trapped between the rollers. Use a cutter to open the sack at the other end, and turn the rollers until the bag is totally emptied. The material is now in the hopper ready to be pumped.



 - Caution ! Keep hands away from the rollers when turning to avoid the risk of fingers becoming trapped.

- **IMER COMPRESSORS** code no. 1107546

The air delivered by the compressor to the spray jet via a rubber hose is used to spray the pumped material. Compressors with different air flow rates can be applied on the machine: from 180 l/min to 600 l/min of air output. The selection of the type of compressor to be used is based on the type of material handled and the type of application. In general, the greater the air flow rate, the finer the material spray delivered.

The 180 l/min compressor is suitable for most products which, after spraying on walls require manual distribution (thick applications: plaster, grouting, finishing mortar etc...). A compressor with greater output is required for all products, which, once sprayed uniformly onto the walls, do not need special spreading operations, or which are only smoothed (thin layer applications: levelling products, colours, some finishing mortars, waterproofing agents etc.).

IMER code no. 1107546, is an autonomous compressor. It is connected to the site panel and the pneumatic circuit of the machine.

 - Caution ! For installation, connections, operation and maintenance, refer to the compressor instruction manual.

 - This compressor is connected directly to the site mains electrical panel.

This enables machine start-up when the air line is open and shutdown when it is closed. The compressor is equipped with an auto-shutdown system, overload cut-out, and main switch, which lights up when the unit is powered.

Maintenance: Check the air filters weekly, clean or replace when necessary, above all if working in excessively dusty environments (see compressor 'operation and maintenance' manual).

It is positioned in the vicinity of the mortar mixer and connected directly to the spray jet hose.

In this case the machine is turned on and off from the jet position, using the remote control supplied with the mortar mixer, or the optional radio control.

- **RADIO CONTROL** code no. 1107518

Enables remote control of machine start-up/shutdown with electrical cable connections.

The receiver is installed in the electrical panel.

The receiver is extremely practical; it can be held in the hand, pocket or fixed to the spray jet, outlet or other element by means of magnets. To turn on the machine, press ON, and to shut down press OFF.

 - Caution ! Protect the unit from water jets; it must never get wet.

- **PRESSURE GAUGE** code no. 1107512

This is a control instrument used to read pressure levels in the material hose lines.

For example: in the case of using traditional mortar at the maximum flow rate of 100 on the panel display, and if pressure exceeds 15 bar (maximum pump pressure). To prevent tripping of the machine protection devices, simply reduce the material flow rate by pressing the pushbutton (-) on the electrical panel, until the value falls below 15 bar.

 - Before using the mortar mixer, ensure that it is fitted with all safety devices.

 - Never insert parts of the body and/or tools in the hopper .

All current standards governing accident prevention and safety devices must be observed in the workplace.

Take care when handling bags of material, to avoid sprays which may come into contact with the eyes or other parts of the body. Wear safety goggles and gloves. Avoid the dispersion of dust which may be inhaled. Always wear a mouth and nose protection mask during use.

 - Never use the machine in areas subject to the risk of explosion/explosives or in underground installations.

The mortar mixer is not equipped with a lighting system and therefore the workplace must be fitted with adequate lighting. The power lines must be laid to prevent any possible damage. Never place the mortar mixer on electric power cables.

Ensure that the electrical connection is protected against the risk of water penetration in connectors. Use exclusively connectors and couplings equipped with water spray protection.

- Never use inadequate or provisional electric lines; if in doubt consult specialist personnel for assistance.

- Repairs to the electrical circuit must be performed exclusively by specialised personnel. Disconnect the machine from the power supply before performing maintenance or repairs.

- Avoid contact of electric wires with movable and/or moving parts of the machine to avoid injury from contact with live metal parts.

## 6. ELECTRICAL SAFETY

The SMALL 50 mortar mixer is constructed according to standard EN 60204-1, with protection against water sprays and protection against overload and power failure.

The mortar mixer must be connected to the earthing circuit.

## 5. OPERATION SAFETY

## 7. MECHANICAL SAFETY

The hazardous points on the IMER mortar mixer are protected by means of suitable safety devices, which must remain fitted at all times and kept in perfect condition, such as the electric motor cooling fan guard, the grid on the hopper, the vibro-screen and the hopper cover to prevent contact with the mixer. All elements are connected to a safety sensor: when disengaged, all moving parts of the machine are shut down.

## 8. TRANSPORT (see fig.3)

-  - **Caution!** Before moving the mortar mixer, always detach the power plug.  
 Before moving the mortar mixer the air hose and material delivery line must be removed.  
 Only a minimal amount of the material should be in the hopper when handling.  
 Move the machine by means of the specific handles.

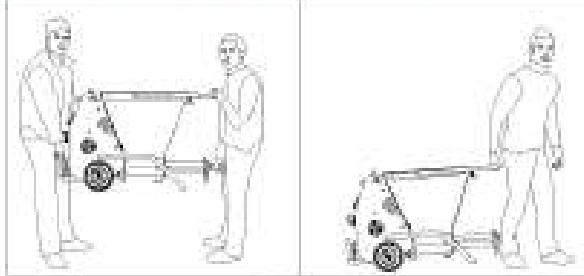


FIG.3

-  - **Caution!** Before lifting the mortar mixer, always disassemble the compressor for separate transport.

-  - **Caution!** Before lifting the machine, always check that all machine components are correctly secured and fitted in place.

To lift the machine, use the three specific attachment points.

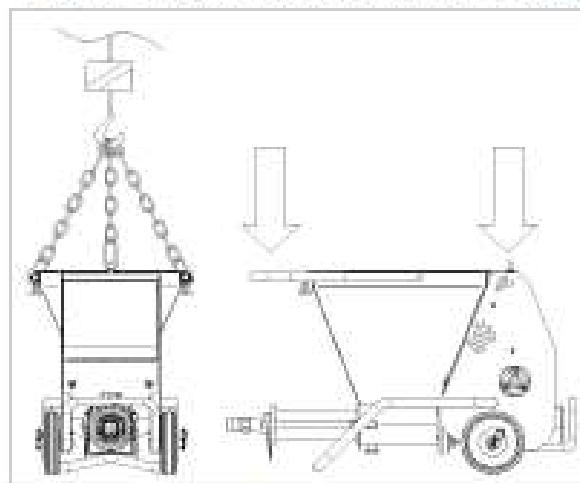


FIG.4

-  - **Caution!** Lift with care to avoid hazardous oscillations.

-  - **Caution!** Never use points other than as specified in figure 3 to lift the machine.

Use lifting equipment suited to the overall weight of the machine indicated in table 1.

## 9. INSTALLATION

Position the mortar mixer in a suitably ventilated environment where it does not constitute an obstruction either during use or cleaning at the end of the work shift and where a minimum quantity of pipelines is required.

Place the machine according to the application in a clear area if ready-to-use bags are fed into the machine; below the mixer outlet in the case of mixes being mixed on site. The machine must always be placed on a flat surface or slightly inclined towards the material outlet.

Route machine pipelines as required by the product application, avoid excessive bends or kinks on the hoses. If pipelines are routed upwards, secure the lines to scaffolding or other support points.

Apply or connect the accessories required for the specific application, with reference to paragraph 4.2.

Always connect the remote control supplied in the case of use without compressed air or when using compressors with capacity of over 400 l/min

## 10. CONNECTIONS

### 10.1 ELECTRICAL CONNECTION (see fig.5)

-  - Ensure that the power supply voltage, mains frequency and electrical connection (socket, fuses, cable) correspond to specifications in table 1.

The electrical power line must be fitted with protection against current overload (e.g. by means of fuses or a thermal magnetic cut-out) and against indirect contact (e.g. with a differential circuit breaker). The electric cable wire size must take into account the operating currents and length of the line to avoid excessive voltage drops.

Avoid use of extension leads wound on drums. The power cable must be suitable for frequent movements and with an abrasion resistant sheath (e.g. type H07RN-F).

Before connecting the mortar mixer to the electrical mains, ensure that all safety devices are fitted and are in perfect condition, and check in particular that the hopper grid is secured in place, that the extension is good condition and that the plugs and sockets are not wet.

Connect the mortar mixer socket on the electrical panel to the mains.


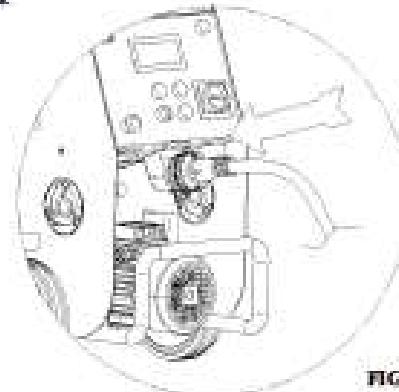


FIG.5

### 10.2 AIR CONNECTION FOR SPRAYING ONLY

In the case of compressors with outputs up to 400 l/min connect the air delivery directly to the jet as in the case of control of the machine by means of the incorporated pneumatic control (see par.4.2).

The machine can be controlled by means of the electric pendant control supplied. This solution is also possible for compressors with output below 400 l/min.

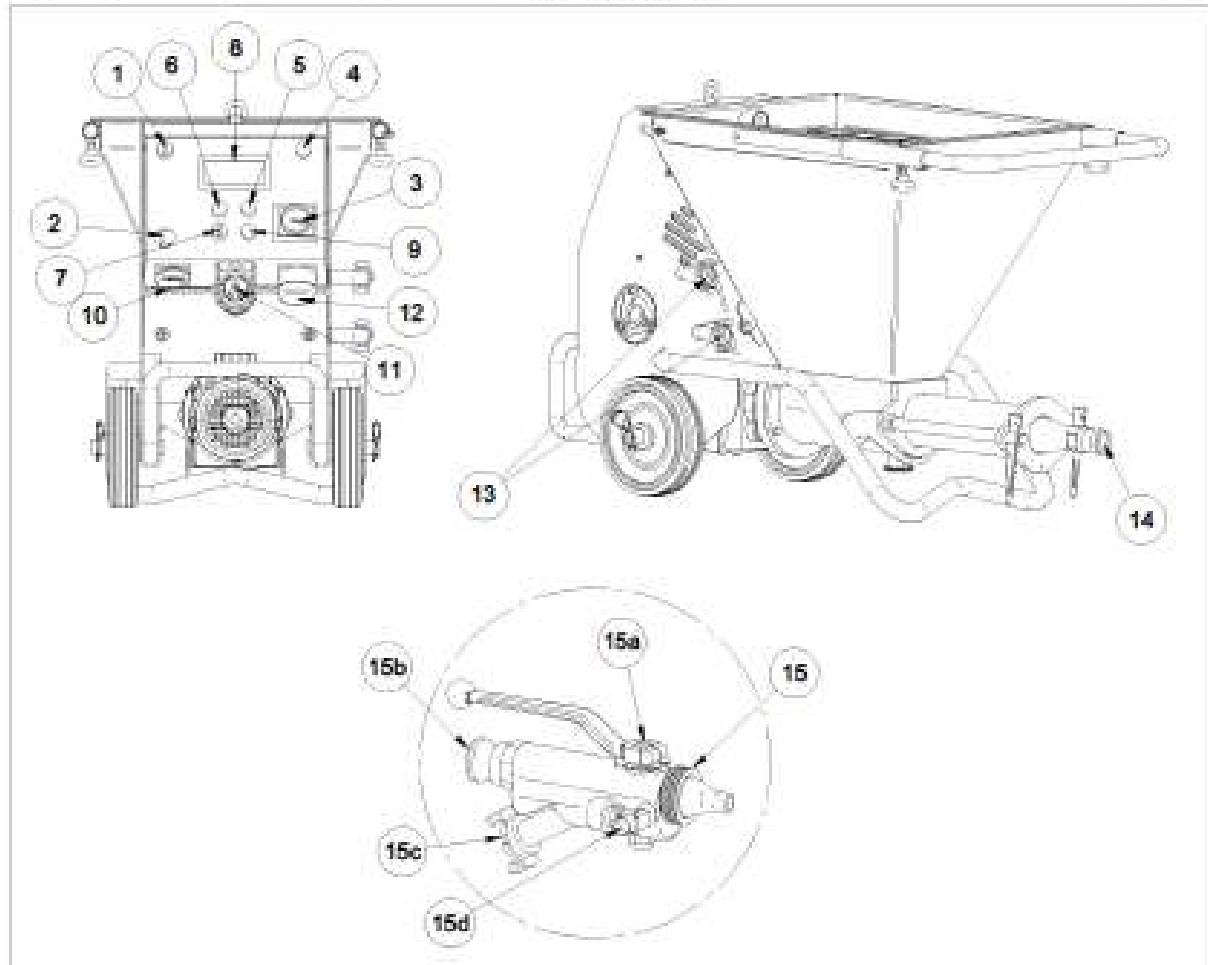

#### 11. START-UP (see figs. 6a,6)

After positioning the machine, prepare a bucket with a quantity of approx. 10L of grout. Pour the grout into the machine hopper, or, in the case of using colourant products, directly in the machine pipelines before connection. In the latter case, pour approx. 10L of coloured product into the hopper. Check the material hoses to ensure perfect condition, that couplings are intact and the relative seals are fitted, then connect them to the delivery manifold and spray jet. Check that the cam levers (A) of the couplings have been tightened correctly and that the seal (B) is fitted as shown in fig. 6a.

Close the spray jet valve (ref. 15a), turn the main switch (ref. 3) to 1(ON), switch on the optional compressor if used, and turn the selector (ref. 7) clockwise to the start position. The pushbuttons (+) flow rate (ref. 6) and (-) flow rate (ref. 5), control the flow rate as shown on the display (ref. 8) at 30. Open the spray jet air valve (or pneumatic control)(ref. 15d) or start the machine by means of the electric remote control: the pump starts to rotate slowly. Depending on the machine configuration, wait until the grout in the hopper reaches the level of the mixer, or until the coloured product is delivered from the jet. At this point shut down the machine by means of the pneumatic or electric control, fill the hopper and start work as required. Adjust the quantity of material delivered from the jet as required, by means of pushbuttons (+) and (-). When the electric remote control is connected, the selector should be set to the start position. The machine is controlled exclusively by means of the electric remote control.

The machine is fitted with protection against power failure: if this occurs, the main switch must be reset to restart the machine (turn from 0 to 1).

To stop the machine in the event of an emergency, press the red emergency button (ref. 2). To isolate the machine, all moving parts are shut down and then turn the main switch to 0 and remove the electric power plug from the socket (ref. 11).

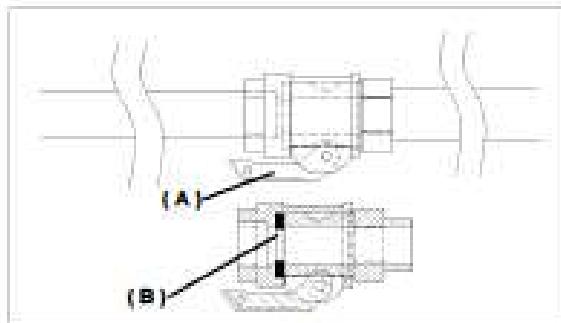


FIG.6a

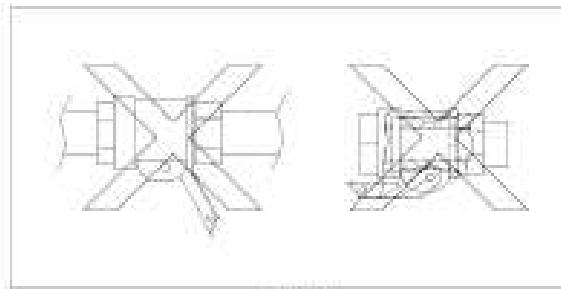


FIG.6b

The machine must never be started up or remain in operation if there is no material in the hopper, to avoid premature wear of the stator and screw.

**Never direct the jet towards yourself or others**

**OVERLOAD AND ELECTRICAL PROTECTIONS**

**⚠** - The electric motors are protected against overload by thermal magnetic cut-outs, the activation of which is indicated by total shutdown of the machine. In this case, after the motors have cooled, the specific personnel should reset the main switch to resume operation.

For the pump motor there is an additional safety protection: a thermal sensor shuts down the machine in the event of a motor temperature overload.

- The inverter device housed inside the electrical panel is equipped with protections for the event of a power failure or if power exceeds the set admissible limits, voltage fluctuations caused by other site utilities, overload of the electric motor due to improper use or overheating of the inverter.

Activation of these safety devices is indicated by illumination of a red light (ref. 2), in which case, authorised personnel must remedy the cause and reset the safety device via the main switch, turning it from 0 to 1.

- The main switch on the electrical panel (ref. 3) is only enabled when power is connected to the protection grid or the vibroscreen is fitted on the machine.

**12. OPERATION (see fig.1)**

**⚠** - The hopper safety grid must always be fitted. Never place materials other than premixed wet materials in the hopper.

**⚠** - Removal of the hopper grid or vibro-screen causes shutdown of the machine moving parts. If this occurs, the grid or vibro-screen must be refitted and the main switch must be reset to restart the machine.

**⚠** - Wear envisaged personal protection devices before starting work

Interruptions exceeding 30min should be avoided, and in any event these pauses should be reduced to the minimum possible when using rapid-drying materials.

Prolonged shutdown can cause clogging in the material delivery lines: in this case no material is delivered from the jet and the pressure gauge indicates a higher pressure than the normal working value.

In this case, turn the selector anticlockwise (opposite position to normal work setting), the pump motor rotates in the opposite direction and the pipelines are depressurised. As soon as the pipeline becomes soft and flexible (the pressure gauge reads 0 bar), stop the machine.

Locate the point of clogging in the hose and remove by tapping the hose with a rubber mallet and totally empty by hand.

**⚠** - If necessary, disconnect the jet or open the pipeline couplings, checking previously if any residual pressure is present.

The material pressure gauge must indicate 0 bar and the pipelines, excluding the clogged sections, must be flexible. The personnel assigned for this task must be specially trained in these procedures.

In the event of any doubt as to the presence of residual pressure, never open the couplings.

Reconnect the pipelines and spray jet, set the main switch to the correct position and restart the machine.

**⚠** - Do not move the machine with the hopper full. A reduction in material flow to the jet may indicate a worn pump. To replace the pump, proceed as follows: with the machine empty and clean, remove the hopper grid, tilt the machine with manifold upwards, remove the wedges, with the aid of a mallet, and at the same time remove the delivery manifold, screw and stator (fig.N).

To insert the screw in the stator, use the lubricant spray available from IMER. Never use mineral oil or grease for screw assembly as this may damage the stator. Avoid all types of benzene. Refit the pump taking care to insert the mixer in the envisaged seats.

In the case of a power failure during operation, clean the machine and pipelines immediately. Also disassemble the pump, remove the screw from the stator and clean. On completion reassemble all components.

Refit the pump taking care to insert the mixer in the envisaged seats.

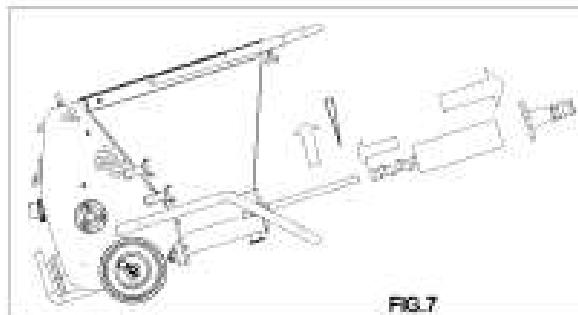


FIG.7

**13. MACHINE SHUTDOWN AND CLEANING**

At the end of work, stop the machine after completely emptying the hopper by means of the relative selector and set the main switch to 0.

- Open the jet valve, detach the jet and clean thoroughly, cleaning the nozzle with the special tool supplied.

**⚠** - Before disconnecting the jet or pipelines, ensure that there is no residual pressure.

- Disconnect the material pipelines from the delivery manifold.

- Remove the hopper grid or vibro-screen and clean thoroughly.

- Remove the plug at the bottom of the hopper and use water to wash the machine thoroughly, starting from the bag splitter if installed.

- Refit the plug in the hopper and fill with water.

- Restart the machine for a few seconds until clean water is delivered from the manifold: this confirms complete cleaning of the pump.

- While the pipelines are still full, insert two cleaning sponges and refit the pipeline in the manifold (fig.8)

- Start the machine again so that the water in the hopper is pumped through the pipelines to remove all residue.

When the two sponges are delivered from the hose, washing is complete.

- At this point, on completion of machine cleaning, turn off the main switch, and disconnect the power plug.



FIG.8

If there is any risk of freezing, open the hopper plug, disconnect the pipelines and drain all water from the circuit (fig.9).

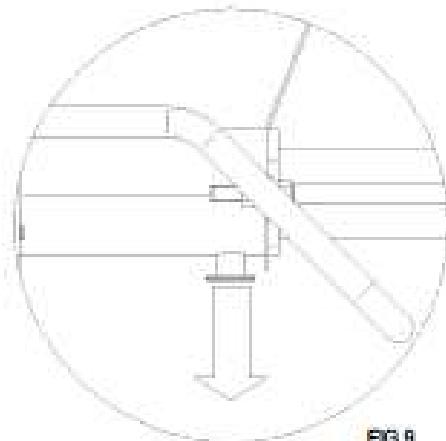


FIG.9

- Before opening the drain plug or the grid, ensure that the main switch is turned to 0 and the plug is disconnected from the power supply.

#### **14. MAINTENANCE**

- Maintenance must be performed by adequately trained personnel, after switching off the machine, disconnecting it from the power supply and emptying the hopper.

Check weekly that the compressor air filter is clean. If deteriorated, replace.

Check weekly that the electric motors are free of dust and dirt and if necessary clean using compressed air.

Check weekly that the plug and socket contacts are clean, dry and rust free.

Every six months arrange for an inspection of the machine by an authorised IMER service centre.

- Spent oil is a special waste. Therefore it must be disposed of according to current legislation.

- Always keep notices and symbols on the machine legible.

#### **15. REPAIRS**

- Never start up the mortar mixer during repairs. Repairs to the electrical installation must be performed exclusively by specialised personnel.

Use exclusively original IMER spare parts; modifications to parts are strictly prohibited.

- If any guards are removed for repairs, ensure they are refitted correctly at the end of work.



FAULT	CAUSE	CORRECTIVE ACTION
<b>Machine does not start, compressor does not start and the blue light is OFF</b>	<b>Electric current:</b> - No current delivered to connector of site panel (fuses?)? - No power delivered to machine (defective connector connection? loose cable?) - Main switch not turned on	- Check points listed alongside
<b>The machine does not start but the compressor starts no signal on display</b>	<b>Electric current:</b> (blue lamp on= main switch in correct position?) - Operating selector not in start position - Hopper grid missing - Plug not inserted correctly in socket - Remote control connected? - Spray jet nozzle dirty or clogged - Supply voltage too high (over 250 volt)	- Check points listed alongside  - Start unit up from remote control - Clean nozzle with special cleaner
<b>The machine starts but stops immediately</b> <b>ERR00</b> <b>ERR04</b>	<b>Material</b> - Material binding properties low (mortar pump seized?) - Material too dry	- Empty the hopper; ensure that the screw is not blocked. When the machine is clean, restart with liquid cement taking care to mix the solution with at least 400/500 kg of binder per cubic metric - Bring the density of the material equal to that of a plastering mortar by adding water - Work with lower flow rates
<b>Material flow to the gun stops.</b> <b>A red light illuminates on the electrical panel!</b> <b>ERR00</b> <b>ERR04</b>	<b>Clogging</b> - Material hose clogged - Spray jet clogged - Low level of binder in mix - Sand not suitable for mix	- Remove obstruction - Connection to compressor detached - Bodies in mix with too large section - Use sand with constantly optimal particle size curve
<b>The machine stops during operation</b>	<b>The following faults appear on display</b>  - ERR00 : Material pressure or friction on screw too high  - ERR01 : Inverter temperature too high  - ERR02 : Motor temperature too high  - ERR03 : Inverter module current too high - ERR04 : System overload  - ERR05 : supply voltage too low	- Reduce flow rate before restarting - Low level of binder in mix, add cement or lime - Sand not perfectly suitable for pumping; correct - Pipeline length excessive; reduce  - Wait for the motor to cool sufficiently before restarting - Check the power line.  - Wait for the motor to cool sufficiently before restarting  - Probable external short circuit - as per ERR00 - Pump seized -  - Check that the power voltage is between 210 and 250 Volt with the machine running and that the cables are correctly sized, and that there is no other equipment (cranes, hoists, saws, cement mixers etc.) connected to the same power line

## ESPLOSO SMALL 50

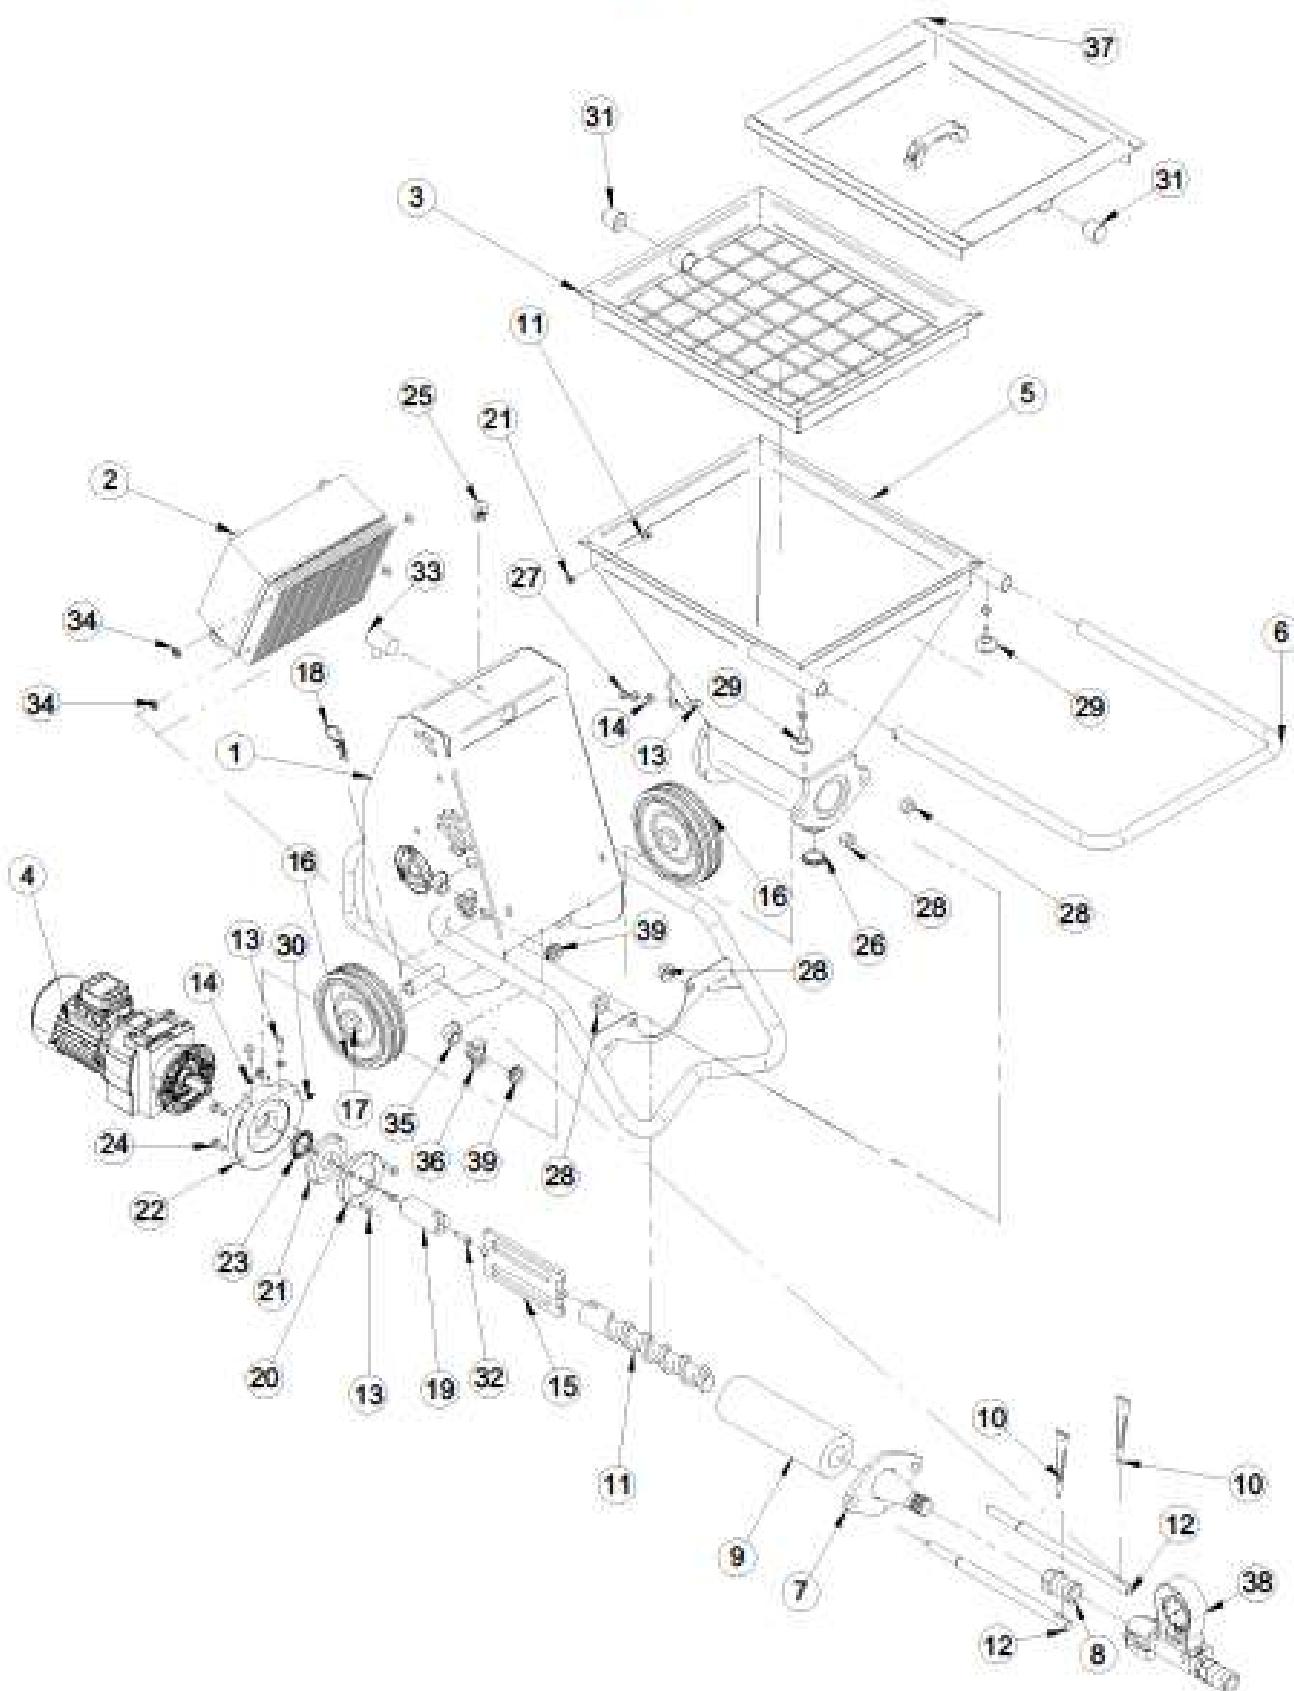


Fig.1 tav 1

TAB. 1 - STRUTTURA MACCHINA - STRUCTURE MACHINE - MACHINE STRUCTURE - MASCHINENAUFBAU - ESTRUCTURA DE LA MAQUINA							
Ref.	Cod.	I	F	GB	D	E	Note
1	3224226	TELAI	CHÂSSIS	FRAME	RAHMEN	BASTidor	
2	3224226	QUADRO ELETTRICO	TABLEAU ÉLECTRIQUE	ELECTRICAL PANEL	SCHALTTAFEL	CUADRO ELÉCTRICO	
3	3224226	RETE	RÉSEAU	MESH	NETZ	RED	
4	3225191	MOTORREDUTTORE	MOTORÉDUCTEUR	MOTOR-REDUCTION GEAR	GETRIEBEMOTOR	MOTORREDUCTOR	
5	3224226	TRASMISSIONE	TRÉMIE	HOPPER	TRICHTER	TOLVA	
6	3224224	MANGIUCIONE					
7	3224227	TUBO USCITA MATERIALE					
8	3223721	ATTACCO A CAMME M.F.					DADO M. 17x1.5
9	3224267	STATOR	STATOR	STATOR	STANDER	ESTATOR	D.B.1.5 500 MONOPHASE
10	3224266	ESTRAITORE CONI MORSE	CÔNES ÉTAUX	CLAMPING CONES	KEGEL	CONOS MORDAZAS	25x7 L=150mm
11	3224489	MOTORE	ROTOR	ROTOR	LÄUFER	ROTOR	
12	3223720	TRAVANTE	TRAIT	TRAILER	STREIF	TRAVATE	
13	3222060	VITE	VIS	SCREW	SCHRAUBE	TORNILLO	M8x10 Z
14	3224140	ROSETTA	RONDELLE	WASHER	UNTERLEGSCHEIBE	ANANDELLA	
15	3224223	ASTA TRASMISSIONE					
16	3226809	RUOTA	ROUE	WHEEL	RAD	RUEDA	
17	3224710	ROSETTA COUPOLA	RONDELLE COUPOLE	WASHER SPLITTER	UNTERLEGSCHEIBE SPLIT	ANANDELLA PASADOR	25x50x4 D3312
18	3224223	BOCCOLA TRASMISSIONE MOTORE					
19	3224251	FLANGIA GUARNAZIONE					
20	3224226	GUARNIZIONE	JOINT	GASKET	DICHTUNG	JUNTA	
21	3224229	FLANGIA MOTORE PALA					
22	3224237	ANELLO PARADOL	PARE-HUILE	ÖL SEAL	ÖLDICHTUNG	GUARDAGOTOS	
23	3224598	VITE	VIS	SCREW	SCHRAUBE	TORNILLO	M8x20
24	3207206	GOLFARE FEMMINA	CHEVILLE À OUILLET FEMELLE	FEMALE EYEBOLT	RINGBUCHSE	ARGILLA HEMBRA	M10
25	3223707	TAPPO BOCCHIERA D'ESTREMO		PLUG	VERSCHLUßSTOPFEN	TAPON TERMINAL	
26	3223570	DADO	ECROU	NUT	MUTTER	TUERCA	M6
27	3223500	DADO	ECROU	NUT	MUTTER	TUERCA	M8x10 Z
28	3224115	VOLANTINO	ROUE À MAIN	HAND WHEEL	HANDRAD	VOLANTE	T30-45 M8x20
29	3224505	INGRASSATORE	GRAISSEUR	GREASE CUP		VASO DE ENGRASSE	TPO 0.16 A.80° 147
30	3223627	BOCCOLA NYLON CALAMITA + MAGNETE					
31	3223270	VITE	VIS	SCREW	SCHRAUBE	TORNILLO	TCD M10x25 Z
32	3224259	SENSORE CAPTEUR		SENSOR	SENSOR	SENSOR	
33	3224591	RONDELLA NYLON					DISEGNO SMALL 50
34	3224188	COMITTO 90° 12° FF OTTONE					
35	3224200	ATTACCO RAPIDO MASCHIO 1/2" OTTONE					
36	3224438	COPERCHIO DI CHIUSURA					
37	3224599	MESEGNATORE DI PRESSIONE MATERIALE					
38	3223627	GUAINZATORE ATTRAVERSAMENTO RAPIDO					

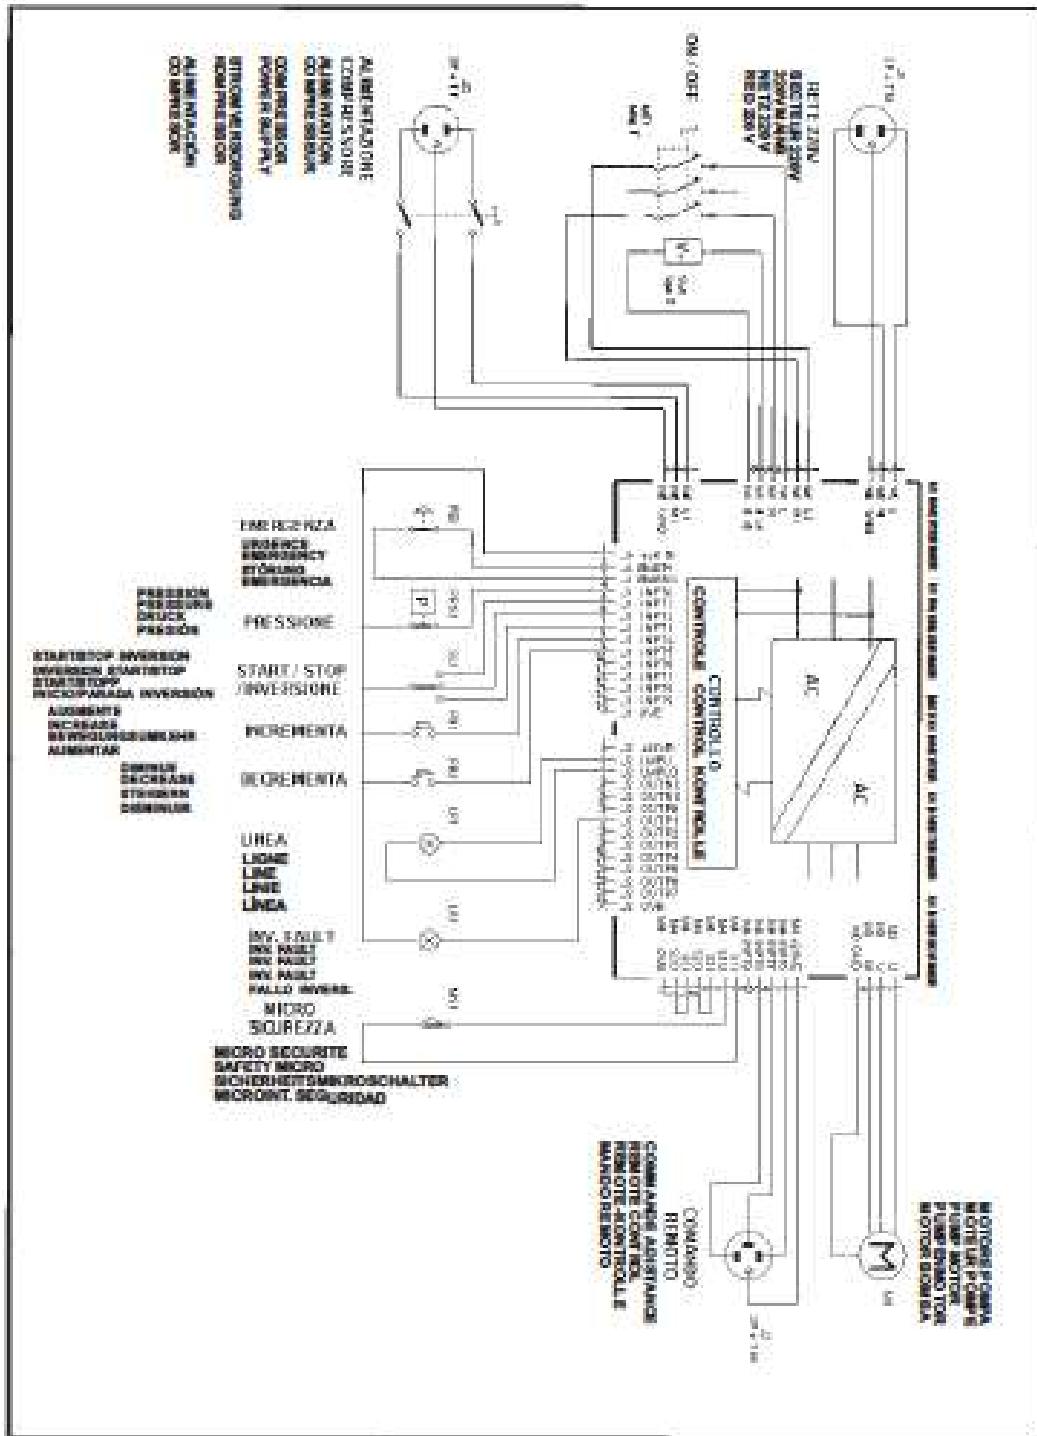


Fig.2

## INVERTER



4

4

1

5

6

7

3

2

13

14

12

11



19

18

9

17

16

Fig.3 tav 2

## TAV. 2 - RICAMBI INVERTER 120V SMALL 50

N.	Cod.	I	F	GS	D	E	Note
1	3225488	SCINTA INVERTER 120V					
2	3225488	BORRINA DI SOANCO 120V					
3	3225487	MAGNETOTERMICO 120V 20A/5A					
4	3225431	KIT MORSETTIERE + PORTACONTATTI INVERTER					
5	3225432	KIT N°10 FUSIBILI VETRO 5X20 RAPIDO 0.5A					
6	3225433	KIT N°10 FUSIBILI VETRO 5X20 RAPIDO 0.5A					
7	3225433	KIT N°10 FUSIBILI VETRO 5X20 RAPIDO 0.5A					
8	3225490	COPERCHIO INVERTER SMALL 50 120V					
9	3225435	PORTALAMPADA COMPLETO ROSSO+LAMPADINA INNESTO A BAIONETTA 120V (FINO A MATRICOLA 30000100)					
9	3225238	PORTALAMPADA COMPLETO ROSSO+LED 120V (DA MATRICOLA 30000101)					
10	3225438	ATTUATORE MAGNETOTERMICO					
11	3225489	PORTALAMPADA COMPLETO 120V					
12	3225437	PULSANTE CON PROTEZIONE IN GOMMA/CONTATTO					
13	3225438	INTERRUZIONE 2 POLE/CON/CONTATTO					
14	3225439	INTERRUZIONE 3 POLE/CON/CONTATTO					
15	3225440	PULSANTE EMERGENZA/CONTATTO DA SERRA/ISOLATORE					
16	3224239	SENSORE MAGNETICO TESTA PIANA, PRESSIONATO CON CAVO 3-POLI-DA 14-MF					
17	2278703	SPINA 90° A PARTE SPHT 120V-16A					
18	3225441	PRISA A PARTE DELL 16-AU-120V-16A-SPHT-IP44					
19	3225442	PRISA A PARTE DELL 16-AU-200V-200V-SPHT-IP44					

## ACCESSORI



FIG.1

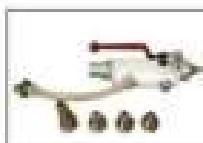


FIG.2



FIG.3



FIG.4

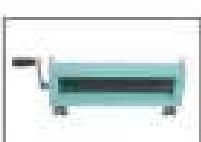


FIG.5



FIG.6



FIG.7



FIG.8



FIG.9



FIG.10

Fig.4 tav 3

TAVOLO ACCESSORI							
N.	Cod.	I	F	GS	D	E	Moto
1	1107000	KIT MOLTA PREMESSOGLIATA TRADIZ.					FIG.1
2	1107008	KIT INIEZIONI					FIG.2
3	1107009	KIT Pittura					FIG.3
4	1107010	KIT RASANTI E FUGHE					FIG.4
5	1107011	LANCIA PER FUGHE RASANTI/FUGHE INIEZIONI CON RACCORDI					FIG.5
6	1107015	VAGLIO VIBRANTE					FIG.6
7	1107016	ROLLO SCHECCIASACCHI					FIG.7
8	1107017	GRIPPO/TENSORE DI PRESSIONE					FIG.8
9	1107018	COPIERITO TRAMBOGGIA					FIG.9
10	1107043	COMPRESSORE ELETTRICO A MEMBRANA 230V/50HZ COMPRESSORE					FIG.10
11	1107046	ELETTRICO A PISTONE 400ml/h. 230V/50HZ					
12	1107048	RADIOCOMANDO					
13	1107044	PROLUNGA COMANDO R DISTANZA 15m					FIG.11
14	1107025	PORTAMATERIALE D25 CON ATTACCHIA CAMME					FIG.12
15	1107026	PORTAMATERIALE D25 CON ATTACCHIA CAMME					FIG.13
16	1107027	PORTAMATERIALE D25 CON ATTACCHIA CAMME					FIG.14
17	1107028	PORTAMATERIALE D19 CON ATTACCHIA CAMME					FIG.15
18	1107029	TUBO-6m-ARIA-D19-D04 ATTACCHI GEDA					FIG.16
19	1107031	TUBO-10m-ARIA-D19 CON ATTACCHI GEDA					FIG.17
20	1107032	TUBO-10m-ARIA-D19 CON ATTACCHI GEDA					FIG.18
21	1107038	KIT N10 SPUGNE D10					FIG.19
22	1107040	LANCIA/SUZIATRICE SMALLKING					FIG.20

## 1107510: VAGLIO VIBRANTE


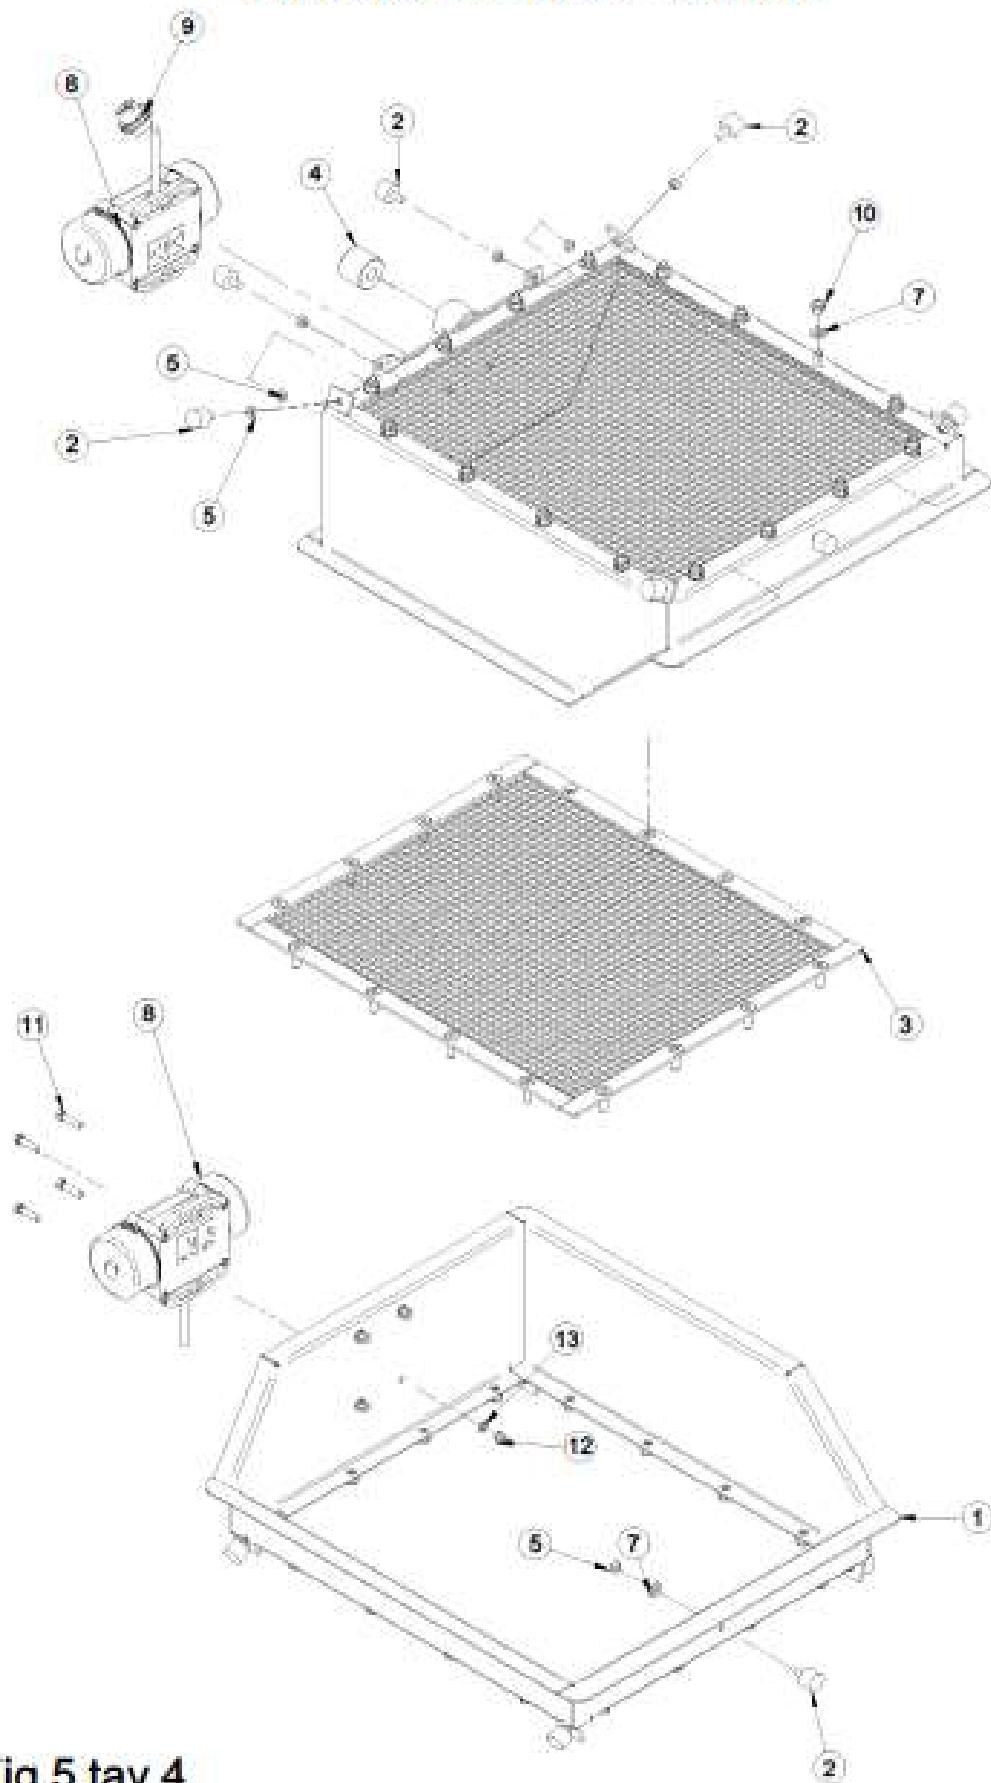


Fig.5 tav 4

## TAV. 4110790 - VAGLIO VIBRANTE-

N.	Cod.	I	F	GB	D	E	Note
1	5224528	VIBROSETA COO VIBRICIATO					
2	5224601	ANTIVIBRANTE					GN 17 0915 ARTEFLEX 70 SHORE
3	5224583	TELAIETE VAGLIO					
4	5224627	BOCCOLA CALAMITA + MAGNETE					
5	2223280	DADO					5588 DIN 7
6	5261539	VITE					TSPEI 8.8 5023 M3x25 Z
7	1224093	ROSETTA PIANA					UNI 6592 DIN Z
8	5224583	MOTORVIBRATORE MICRO					230V/50HZ
9	1203504	SPINA VOLANTINO					V220 IP67 16A
10	5210623	DADO AUTOBLOCCANTE DI BASSO					
11	22232010	VITE					TE 8.8 57398 X057
12	2223204	DADO					DIN 922 M6 CLASSE 4
13	2224530	RONDILLA					UNI 6592 DIN 6 DE12.5, G18 Z

MOTORIDUTTORE 3225191

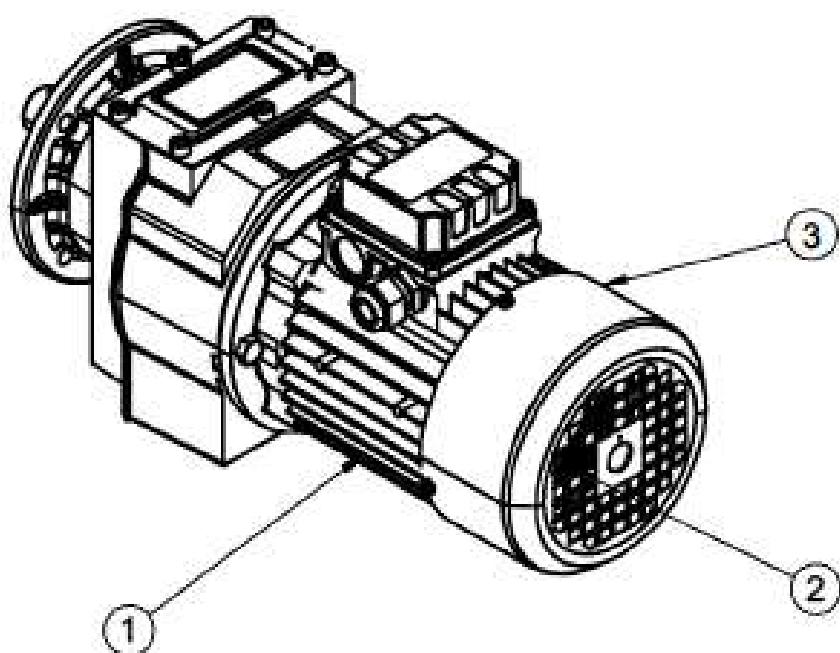

3225191 MOTORIDUTTORE-

Nº	Cod.	I	F	GB	D	E	Note
1	3226244	STATOR					
2	3226239	CORRENTEOLA					
3	3226240	VENTOLA					

## COMPRESSORE 1107543

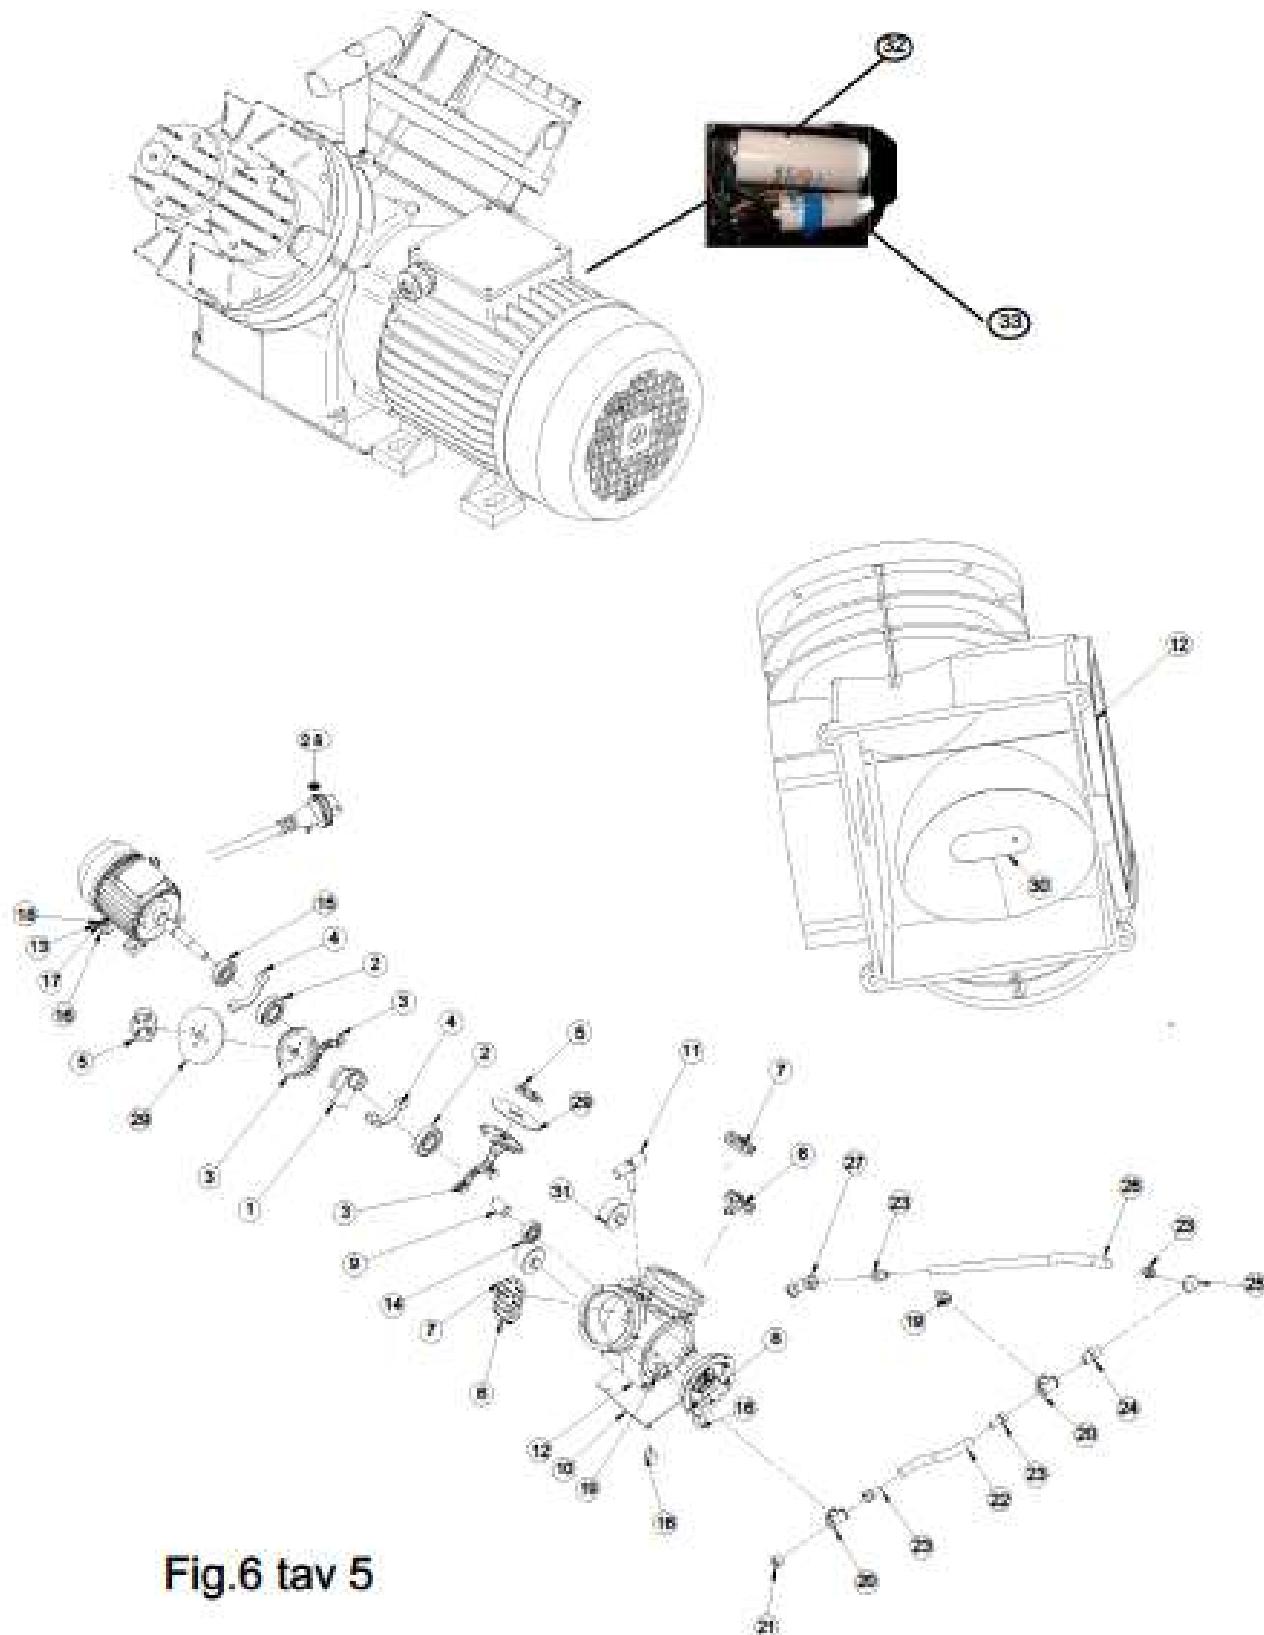


Fig.6 tav 5

TAV. 3 - 1118TS43 COMPRESSORE. IMER 230V - 2002

N.Ord.	Cod.	I	F	G	H	E	Moto
1	3224390	ECCENTRICO					
2	3224571	CUSCINETTO					6207.2RS1
3	3224529	BELLA					
4	3224530	TESTA BELLA					
5	3224531	FERMO MEMBRANA					
6	3224534	TAPPO SX					
7	3224535	TAPPO DX					
8	3224536	COPERCHIO					
9	3224532	DISTANZIALE					
10	3224537	PIASTRA COMPRESSORE					
11	3224538	MANGIA					
12	3224539	SCATOLA					
13	3224537	MOTORE COMPRESSORE					230V
14	3224531	CUSCINETTO					6204.2RS
15	3224783	CUSCINETTO					6205.2RS1 FAG-SKF
16	3224558	ANTIVIBRANTE					C125005 MOTUS ARTEPLEX
17	3224531	RONDELLA					
18	3223280	DADO					
19	3223194	NPLES					107°/38°
20	3223817	RACCORDO					100P 10°
21	3223609	REDUZIONE					M. 107° E. 104°
22	3226049	TUBO					1x18.5 cm
23	3226873	PORTOGOMMA					M. 107° D. 13
24	3224392	CONCO-COMBO					10°
25	3224168	GOMITO					P.P. 10°
26	3226849	TUBO					L=95 cm
27	3224205	CURVA AMPIO RAGGIO 45°					P.P.10°
28	3225845	CAVO					PREZZA 1EA 230V
29	3224539	MEMBRANA COMPRESSORE					
30	3224549	LAMELLA COMPRESSORE					
31	3224560	FILTO COMPRESSORE					
32	3226891	CONDENSATORE					MF 25.130-450V MF 25.430 VAC
33	3226783	CONDENSATORE					5.0 Hz

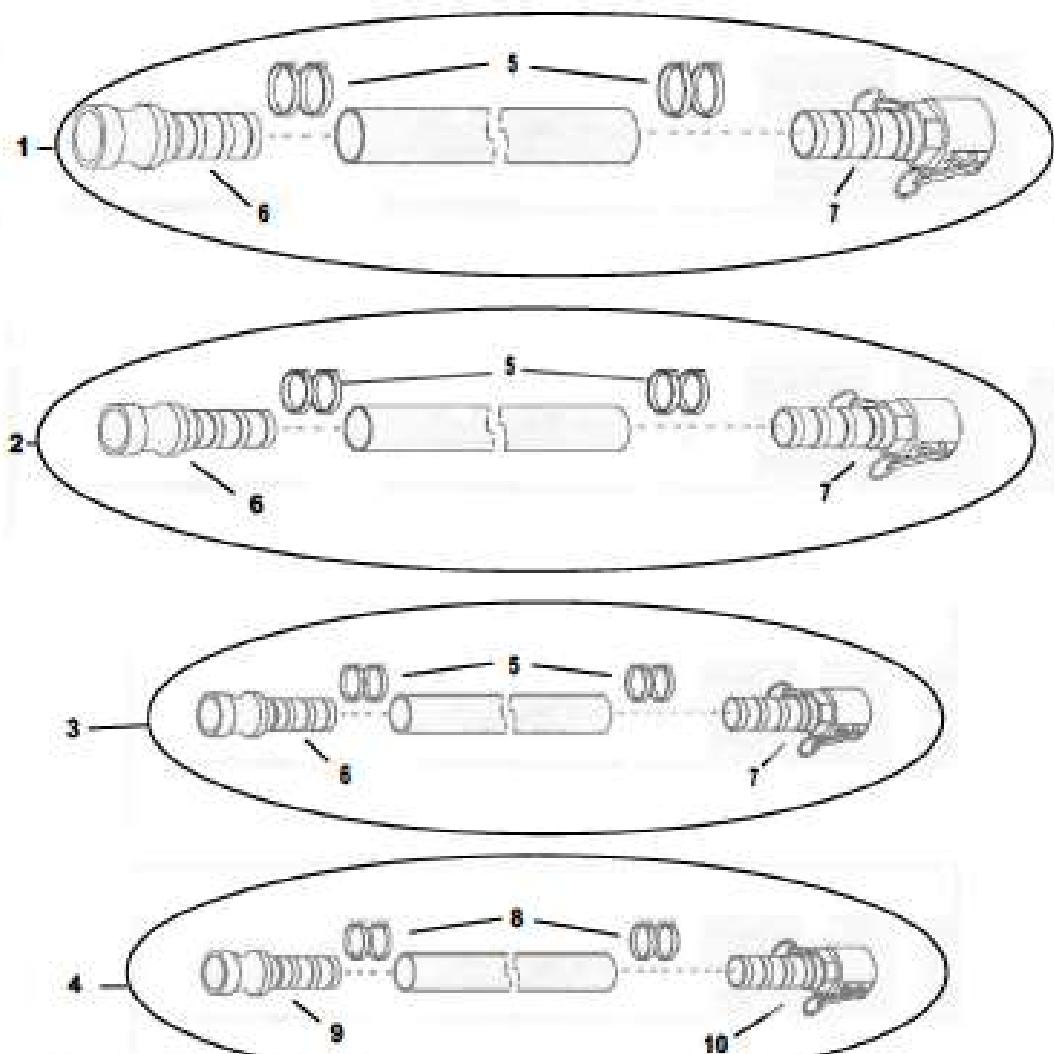


Fig.7 tav 6

TAV. 6-TUBI MATERIALI							
N.	Cod.		F	G	H	I	M
1	1107525	TUBO 15 M1 PORTAMATERIALI D25 CON ATTACCHI A CAMME					
2	1107526	TUBO 15 M1 PORTAMATERIALI D25 CON ATTACCHI A CAMME					
3	1107527	TUBO 6 M1 PORTAMATERIALI D25 CON ATTACCHI A CAMME					
4	1107528	TUBO 15 M1 PORTAMATERIALI D19 CON ATTACCHI A CAMME					
5	3225924	MORSETTO STRINGITUBO 32-48					32-48
6	3225933	RACCORDO KAMLOCK A FASCIETTARE DN 27M					
7	3225934	RACCORDO KAMLOCK A FASCIETTARE DN 37F					
8	3225943	MORSETTO STRINGITUBO 28-35					28-35
9	3225929	RACCORDO KAMLOCK A FASCIETTARE DN 19 M					
10	3225930	RACCORDO KAMLOCK A FASCIETTARE DN 19 F					

1107540: LANCIA SPRUZZATRICE

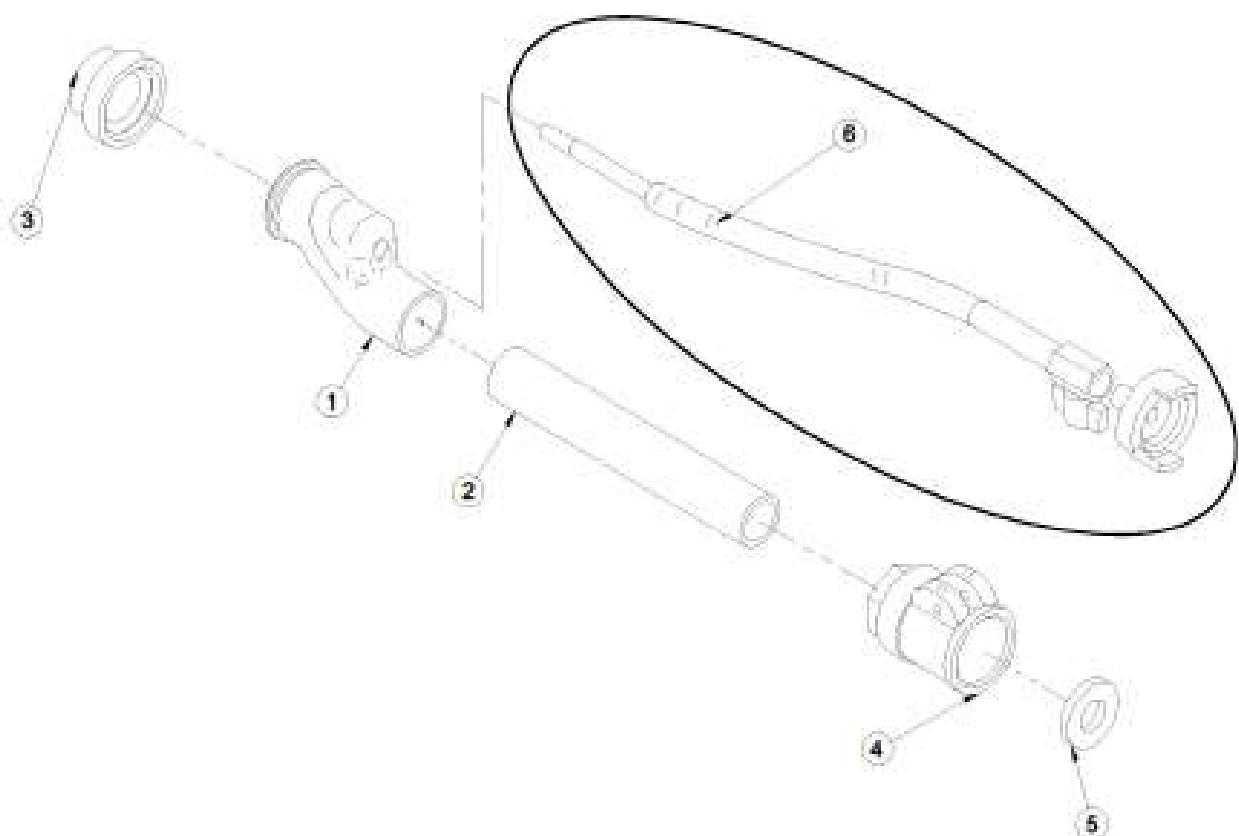
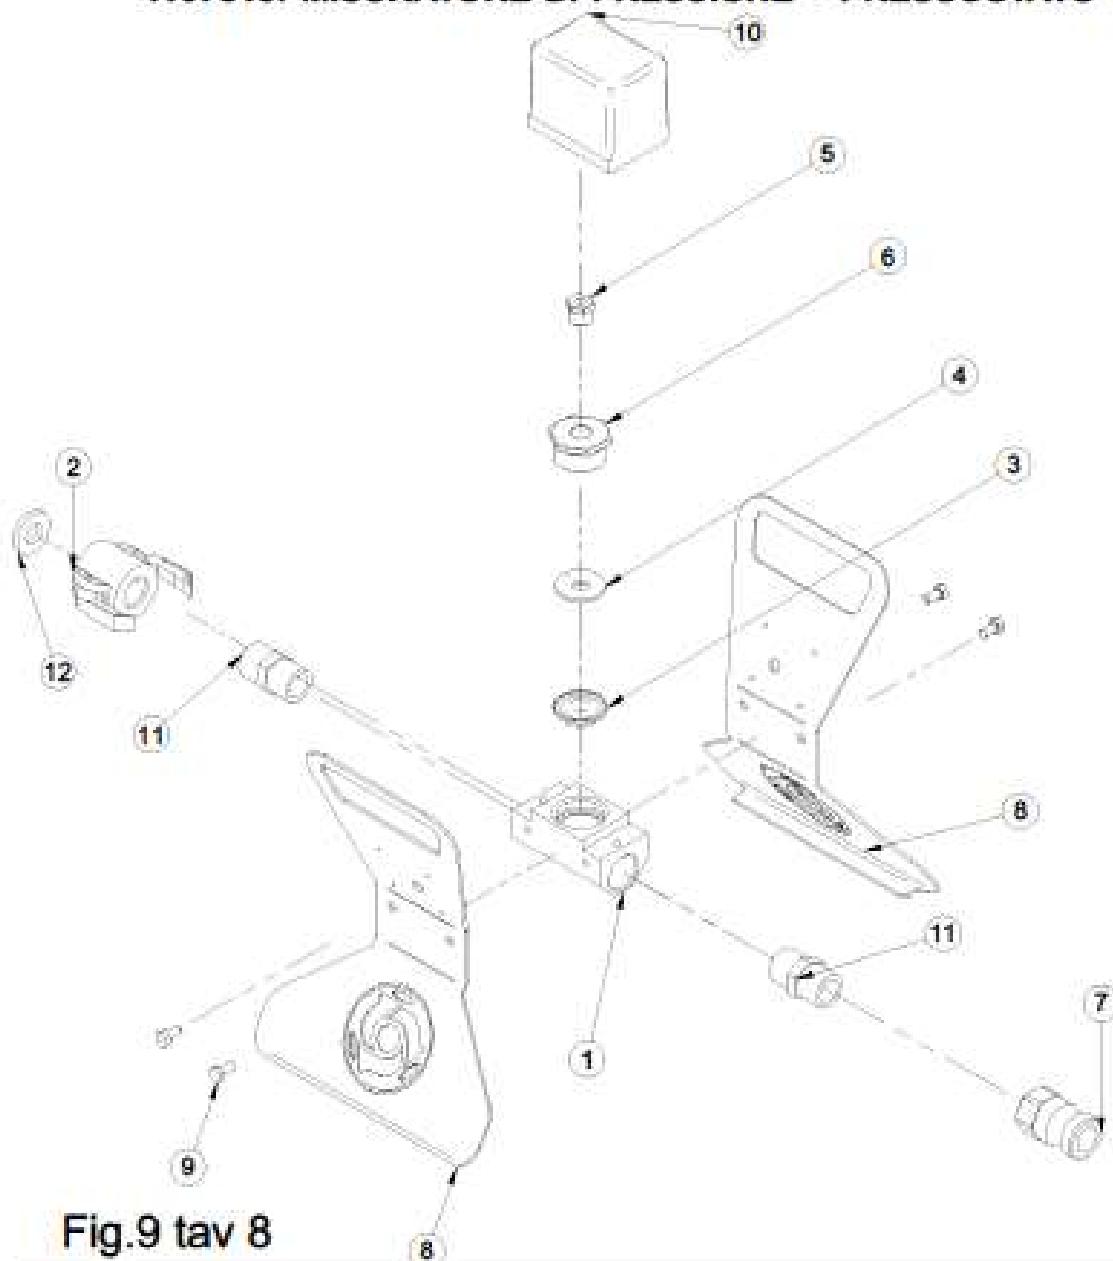


Fig.8 tav 7

TAV. 7, 1107540: LANCIA SPRUZZATRICE							
N.	Cod.	I	F	GS	D	E	Note
1	9223045	TESTA PER LANCIA SPRUZZATRICE					
2	9223048	TUBO IN PLASTICA PER LANCIA SPRUZZATRICE					
3	9223410	DUSE DN14					
4	9223408	ATTACCO FEMMINA M/T					
5	9224800	GUARNIZIONE ATTACCO A CAMME DN 25					
6	9225668	TUBO ARGA COMPLETO LANCIA SPRUZZATRICE					

**1107515: MISURATORE DI PRESSIONE + PRESSOSTATO**



**Fig.9 tav 8**

TAV 8-MISURATORE DI PRESSIONE + PRESSOSTATO

N.	Cod.	I	F	GB	D	E	Note
1	3224702	BLOCCHETTINO MISURATORE DI PRESSIONE					
2	3224703	ATTACCO A CAMME D.25 F-1" G-F					
3	3223302	MEMBRANA					
4	3224400	ROSETTA					6239 D. 12045
5	3223600	RIDUZIONE M.127 F.197 OTTONO					
6	3224173	RIDUZIONE M.127 F.107 OTTONO					
7	3223721	ATTACCO A CAMME					DN25 M-1" GM
8	3224705	LAMIERA APPOGGIO MISURATORE PRESSIONE					
9	3222004	VITE TE M.8X16 Z					TE M.8X16 Z UNI 5739 B.B
10	3224700	PRESSOSTATO ST 140-0 DAN 1M. G					
11	3224053	NIPPLES 1"					
12	3224600	GUARNIZIONE ATTACCO A CAMME DIN 25					

**1107005: KIT MALTA PREMISCELATA TRADIZIONALE**



**Fig.10 tav 9**

TAV. 1107005: KIT MALTA PREMISCELATA TRADIZIONALE

Nr.	Cod.	I	F	G8	D	E	Note
1	3229411	LANZA SPRUZZATRICE					
2	3229436	DEFLETTORE TRADIZIONALE D12					
3	3229695	SPUGNA DI LAVA D10 D30					
4	3229425	DUSE D10					
5	3229694	PULITORE USELLO D4.5					
6	1107025	TUBO 15m PORTAMATERIALE D25 CON ATTACCHI GOMMA					
7	1107032	TUBO 15m ARIA D13 CON ATTACCHI GOMMA					

1107010: KIT RASANTI E FUGHE

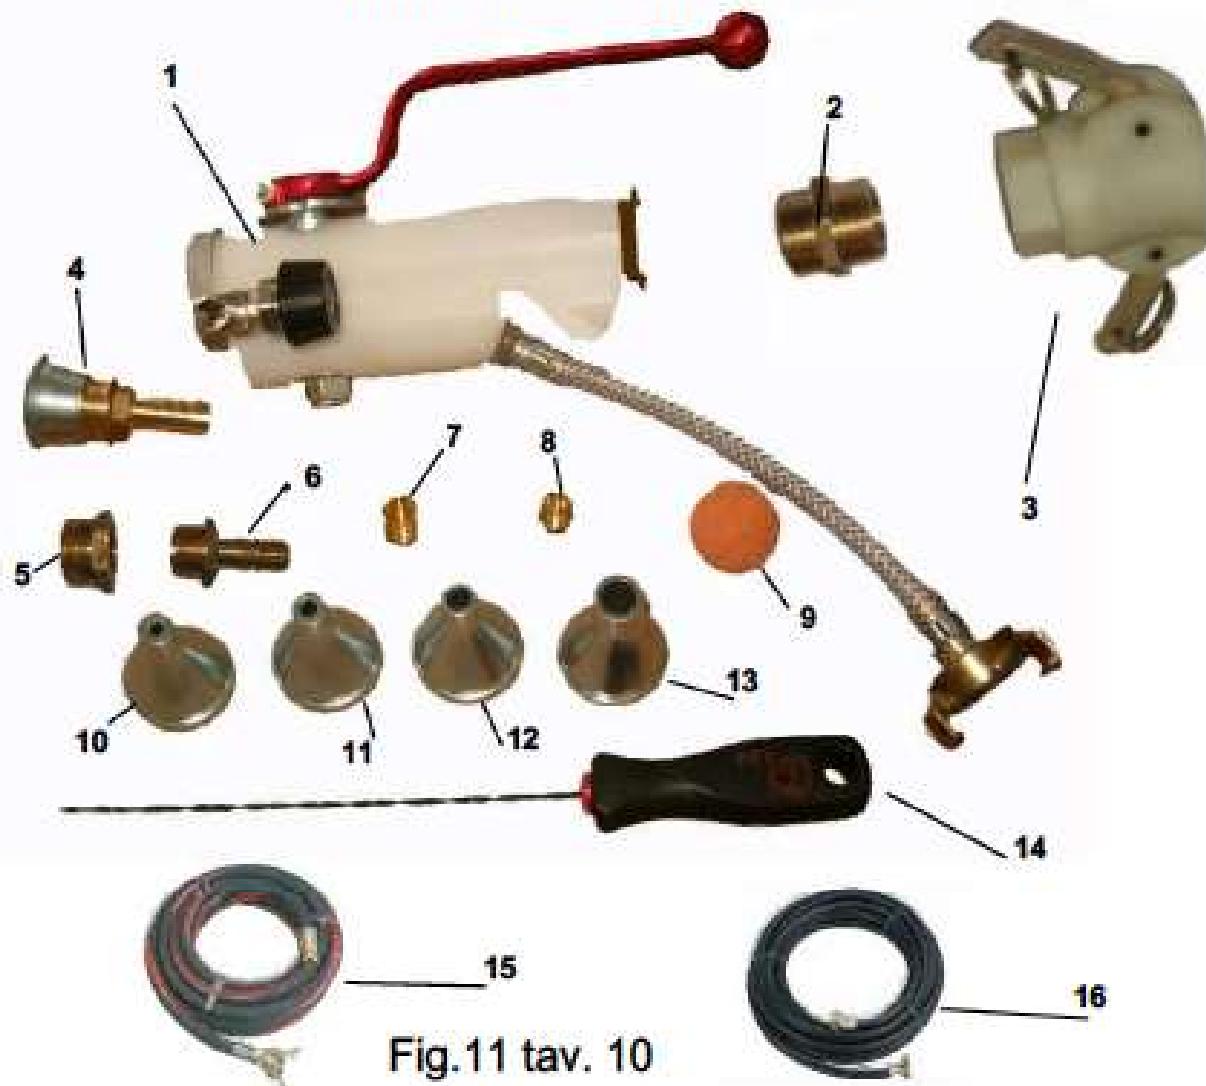


Fig.11 tav. 10

TAV. 10: 1107010: KIT RASANTI E FUGHE

N.	Cod.	I	F	GS	G	E	Note
1	3234651	LANCE SPRUZZATORE PER RASANTI/FUGHE E RISODA					
2	3234650	NIPPLE 1" OTTONO					
3	3234701	ATTACCO A CANNA DN25 F/F PLAST SETON					
4	3234704	DEFLETTORE CON PORTAGOMMA D16 SMALL 60					
5	3234657	RIDUZIONE TUBO 1/2" OTTONO					
6	3233613	PORTAGOMMA M. 12" X 13 OTTONO					
7	3236019	TAPPO FILETTATO M. 1/4"					
8	3236018	TAPPO FILETTATO M. 1/4"					
9	3233695	SPUGNA DI LAVAGGIO D10					
10	3234039	DEFLETTORE SMALL 60° D6					
11	3234032	DEFLETTORE SMALL 90° D6					
12	3234079	DEFLETTORE SMALL 120° D6					
13	3234413	DEFLETTORE SMALL 150° D6					
14	3233694	PULITORE UGELLO D4.5					
15	1107025	TUBO 15m PORTAMATERIALE D13 CON ATTACCHI GIRELLA CANNE					
16	1107022	TUBO 10m ARRA D13 CON ATTACCHI GIRELLA					

1107010:KIT Pittura

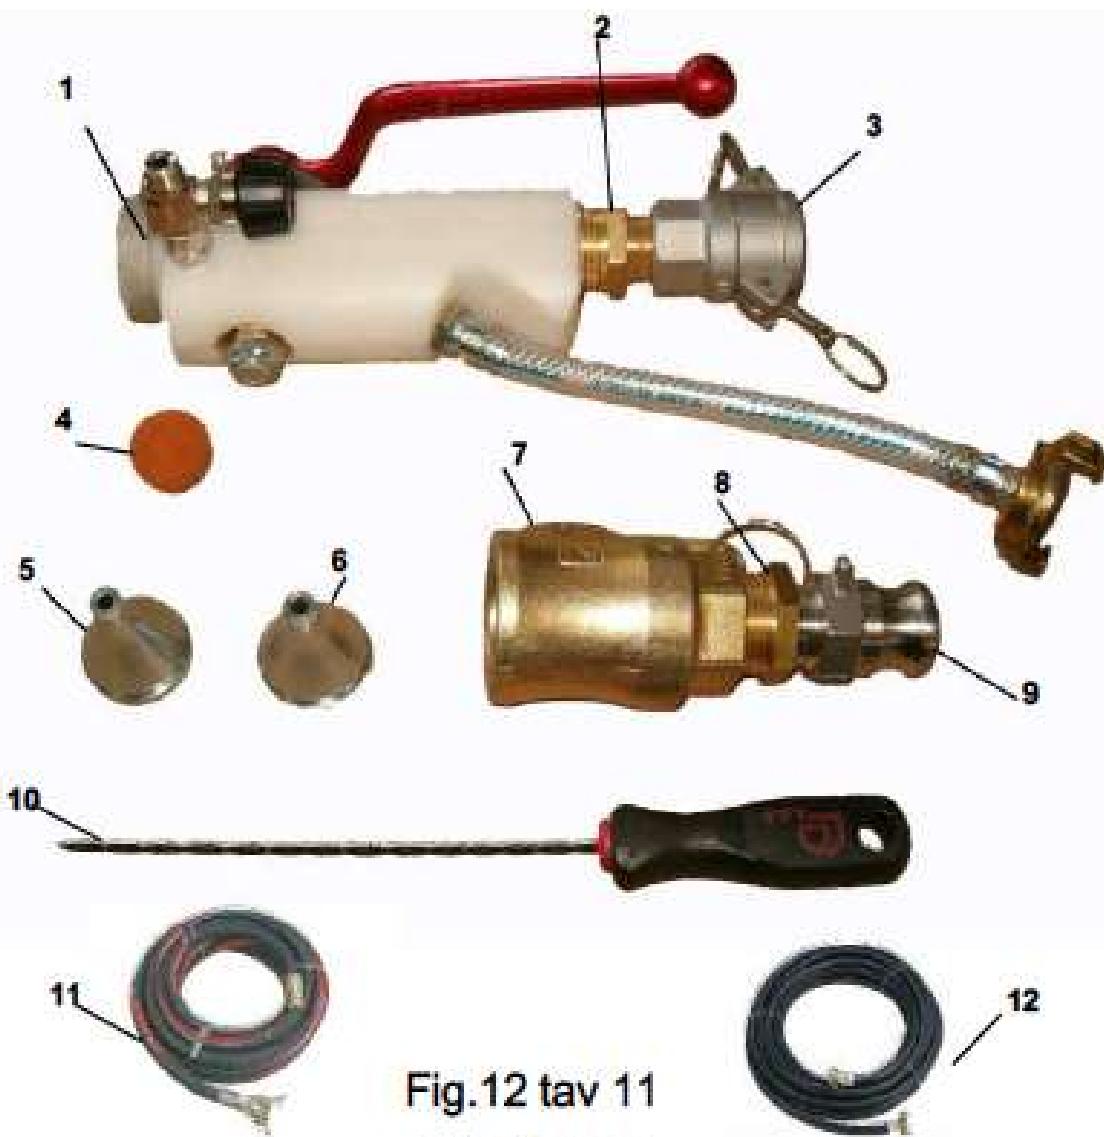


Fig.12 tav 11

Tav.11. 1107010: KIT Pittura

Nr.	Cod.	I	F	GS	D	E	Note
1	3224301	LANCE SPRUZZATRICE PER BAGANTI FUSIBILI E MEZZI.					
2	3224707	IMPUGNATURA TUBO D'ARIA IN OTTONO CIL.					
3	3224709	ATTACCO A CAMME DN19 F-M 90° ALL 300303.					
4	3224809	SPUGNA DI LAVAGGIO CO2.					
5	3224303	DEFLETTORE SMALL 90° DS.					
6	3224302	DEFLETTORE SMALL 90° DA.					
7	3224709	ATTACCO A CAMME DN19 F-M 90° BETONCINO.					
8	3224808	RIDUZIONE M14x1,5-34° OTTONO.					
9	3224308	ATTACCO A CAMME DN19 M14x1,5 INOX.					
10	3225004	PULITORE USOELLO D 40.					
11	1107020	TUBO 10m PORTAMATERIALE DN19 CON ATTACCHIA CAMME.					
12	1107030	TUBO 10m ASA DN19 CON ATTACCHI GESSA.					

1107006: KIT INIEZIONI



Fig.13 tav 12

TAV12 1107006 KIT INIEZIONI

N.	Cod.	I	F	GB	D	E	Note
1	3224001	LANZA SPRUZZATRICE PER RASANTI FUGHE E INIEZIONI					
2	3224006	IMPLES 1" OTTONI					
3	3224701	ATTACCO A CAMME DN25 F11G F PLAST. BETON.					
4	3224704	DEFLETTORE CON PORTAGOMMA D.16 SMALL 50					
5	1220019	TAPPO FILOTTATO M.1mf					
6	1220018	TAPPO FILOTTATO M.1mf					
7	3223604	PULITORE USCELLO D45					
8	3223605	SPUGNA DI LAVAGGIO D30					
9	110700601	TUBO 10m PORTAMATERIALE D25 CON ATTACCHI A CAMME					
10	1107007	TUBO 3m PORTAMATERIALE D25 CON ATTACCHI A CAMME					
11	3224704	MISURATORE PRESSIONE + PRESSOSTATO					

## 1107512: GRUPPO MISURATORE PRESSIONE

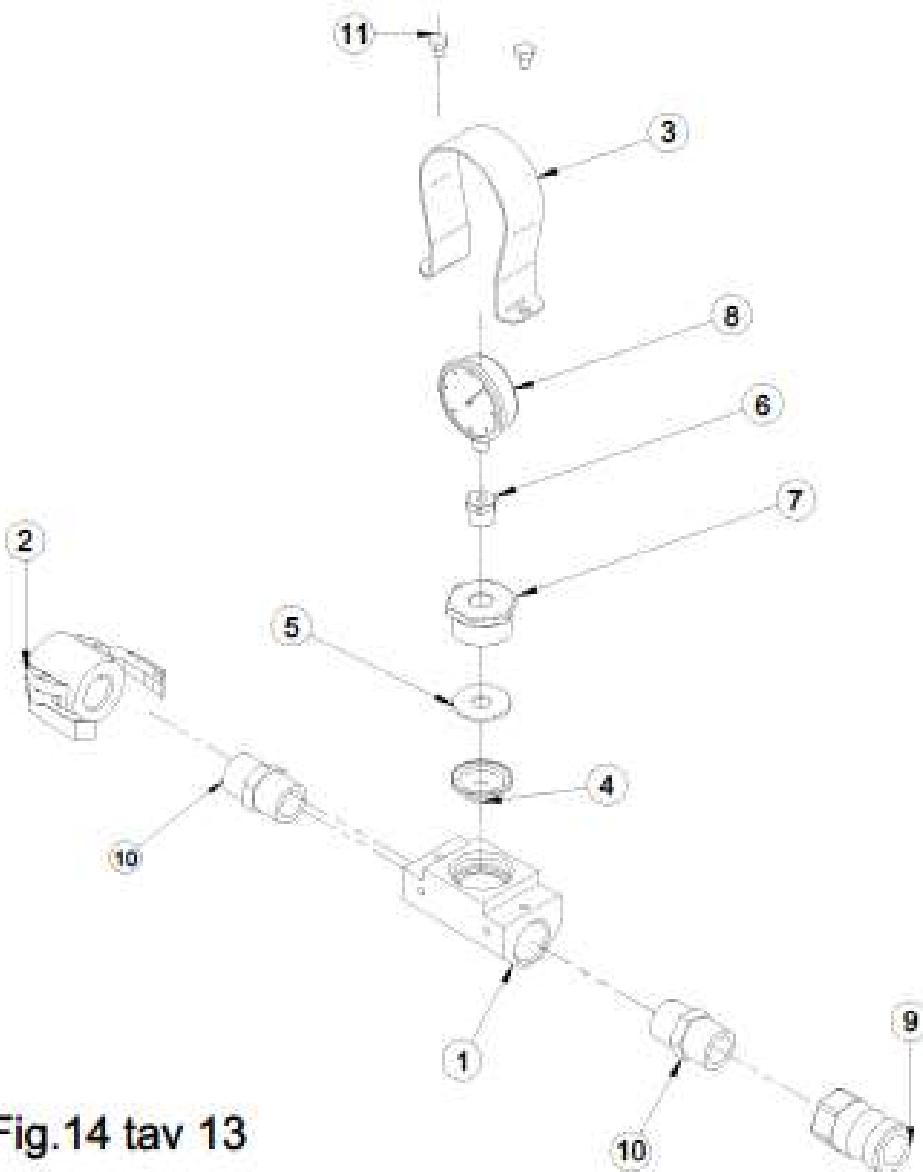
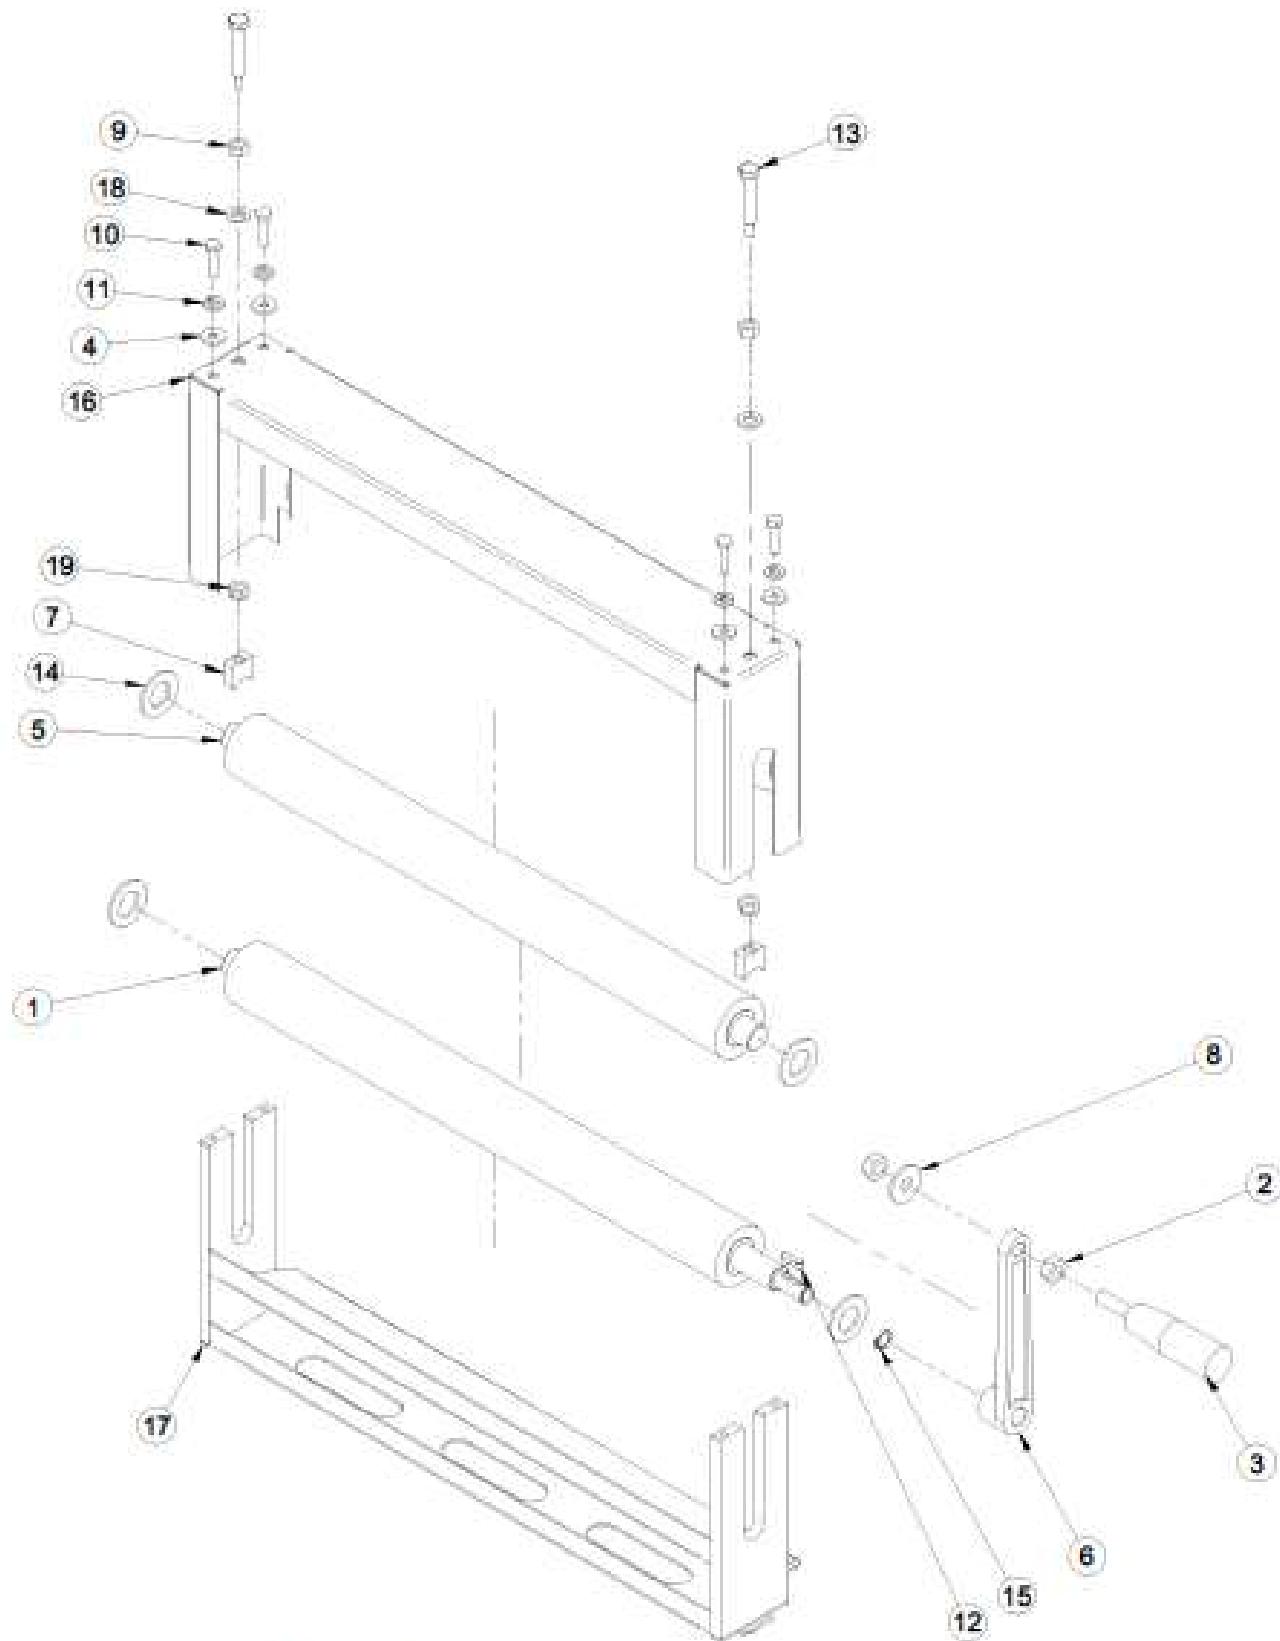


Fig.14 tav 13

TAV 11 MISURATORE DI PRESSIONE							
N.R.	Cod.	I	F	GG	D	E	Note
1	3224762	BLOCCHETO MISURATORE DI PRESSIONE					
2	3224769	ATTACCO A CAMME D.25 F.1" G.F.					
3	3223369	PROTEZIONE MANOMETRO					
4	3223362	MEMBRANA					
5	3224460	ROSETTA					6538 D. 15348
6	3223699	RIDUZIONE M.1/2" F.1/4" OTTONO					
7	3224173	RIDUZIONE M.1/2" F.1/2" OTTONO					
8	3223699	PROTEZIONE MANOMETRO					
9	3223071	ATTACCO A CAMME					DN25 M.1" GM
10	3224353	NIPPLES 1"					
11	3223015	VITE					T6 MM X 10Z UNI 5739.8
12	3224830	GUARNOZIONE ATTACCO A CAMME					

**1107511: RULLO SCHIACCISACCHI**



**Fig.15 tav 14**

## TAV 14 1107511: SCHIACCASACCHI

N.	Cod.	I	F	G8	D	E	Note
1	5204090	RULLO INFERIORE COMPLETO					
2	5223680	DADO					UNI-5528 M10 CLASSE 8
3	5208748	IMPUGNATURA A MANICO					20X88 SPEC. M10
4	5224531	RONDELLA					UNI-6593 DN16 DE16 52.2
5	5224597	RULLO SUPERIORE COMPLETO					
6	5208648	MANOVILLA REALTAMENTO 5140					
7	5223793	ANCORAGGIO SPINTA RULLO					
8	5224080	RONDELLA					UNI-6593 DN16 DE16 52.2
9	5223570	DADO					UNI-5528 M8 CLASSE 8
10	5222010	VITE					M8 X 25 Z UNI-5729
11	5224055	ROSETTA GROWER					1751 D6 Z
12	5203117	LINGUETTA					50X30
13	5224792	VITE TORNITA					8.8 5739 M20X55
14	5224645	RONDELLA					UNI-6593 DN21 DE21 52.2
15	5208792	ANELLO ARRESTO					3603 E13
16	5224288	CARTER					
17	5224293	TELAI SCHIACCASACCHI					
18	5224140	ROSETTA					UNI-6593 DN16 Z
19	5210823	DADO					DIN965 M8 CLASSE 8

**1.- DICHIARAZIONE CE DI CONFORMITÀ PER MACCHINE ( Direttiva 98/37/CE, Allegato II, parte A )**

- DECLARATION CE DE CONFORMITE POUR LES MACHINES (Directive 98/37/CE, Annexe II, Chapitre A)
- EC DECLARATION OF CONFORMITY FOR MACHINERY (Directive 98/37/EC, Annex II, sub A)
- EG-KONFORMITÄTSERKLÄRUNG FÜR MASCHINEN (EG-Richtlinie 98/37/EG, Anhang II, sub. A)
- DECLARACION "CE" DE CONFORMIDAD SOBRE MAQUINAS (Según la Directiva 98/37/CE, Anexo II, sub. A)

2.- Fabbricante - Fabricant - Manufacturer - Hersteller - Fabricante : IMER International S.p.A.

3.- Indirizzo - Adresse - Address - Adresse - Dirección : Loc. Salceto, 55 - (53036) Poggibonsi - Siena - Italy

4.- Dichiara che il prodotto - Déclare ci-après que la machine - Hiermit declares that the machine - Erklärt hiermit daß die maschine - Declaramos que el producto

**INTONACATRICE:**

**GUNITEUSE :**

**MORTAR MIXER:**

**VERPUTZMASCHINE:**

**ENFOSCADORA:**

<b>SMALL 50</b>	Potenza netta installata: Puissance nette installée : Net installed power: Installierte Nettoleistung: Potencia instalada neta:	<b>kW</b>
115 V/60 Hz		1.5

5.- Matricola N°:

- Número de serie:
- Serial number:
- Serie Nummer:
- Numero de serie:

6.- E' conforme ai requisiti della Direttiva Macchine (98/37/CE), ed alla legislazione nazionale che la traspone.

- Est conforme aux dispositions de la Directive "Machines" (98/37/CE), et aux législations nationales la transposant.
- Complies with the provisions of the Machinery Directive (98/37/EC), and the regulations transposing it into national law.
- Konform ist den einschlägigen Bestimmungen der EG-Maschinenrichtlinie (98/37/EG), mit dem entsprechenden Rechtsact zur Umsetzung der Richtlinie ins nationale Recht.
- Corresponds a las exigencias básicas de la directiva de la CE sobre máquinas (98/37/CE) y la correspondiente transposición a la nacional.

7.- E' conforme alle condizioni delle seguenti altre direttive: 89/336/CEE; 73/23/CEE; 2000/14/CE ed alla legislazione nazionale che la traspone.

- Est conforme aux dispositions des Directives suivantes: 89/336/CEE; 73/23/CEE; 2000/14/CE et aux législations nationales la transposant.
- Complies with the provisions of the following other directives : 89/336/EEC; 73/23/EEC; 2000/14/EC and the regulations transposing it into national law.
- Konform ist mit den einschlägigen Bestimmungen folgender weiterer EG-Richtlinien : 89/336/EWG; 73/23/EWG; 2000/14/EG mit dem entsprechenden Rechtsact zur Umsetzung der Richtlinie ins nationale Recht.
- Está, además, en conformidad con las exigencias de las siguientes directivas de la CEE: 89/336/CEE; 73/23/CEE; 2000/14/CE y la correspondiente transposición a la nacional.

8.- Inoltre dichiara che sono state applicate le seguenti (parti/clauses d) norme armonizzate:

- EN 12100-1; EN 12100-2; EN 60204-1;
- EN ISO 3744 con livello di potenza sonora misurato  $L_{WA} = 76$  dB e livello di potenza sonora garantito  $L_{WA} = 79$  dB.
- Et déclare par ailleurs que les suivantes normes harmonisées ont été appliquées: EN 12100-1; EN 12100-2; EN 60204-1; EN ISO 3744 avec niveau de puissance sonore mesuré  $L_{WA} = 76$  dB et niveau de puissance sonore garanti  $L_{WA} = 79$  dB.
- The following national technical standards and specifications have been used: EN 12100-1; EN 12100-2; EN 60204-1; EN ISO 3744 with measured sound power level  $L_{WA} = 76$  dB and guaranteed sound power level  $L_{WA} = 79$  dB.
- Das weiteren erklären wir, daß folgende harmonisierten Normen zur Anwendung gelangten: EN 12100-1; EN 12100-2; EN 60204-1; EN ISO 3744 mit gemessener Schallleistungspegel  $L_{WA} = 76$  dB und garantierter Schallleistungspegel  $L_{WA} = 79$  dB.
- Además declaramos que las siguientes normas armonizadas fueron aplicadas: EN 12100-1; EN 12100-2; EN 60204-1; EN ISO 3744 con nivel de potencia sonora medida  $L_{WA} = 76$  dB y nivel de potencia sonora garantizado  $L_{WA} = 79$  dB.


9.- La procedura per il controllo di conformità utilizzata è in accordo all'Allegato V della 2000/14/CE.

- La procédure utilisée pour le contrôle de la conformité est en accord avec l'annexe V de la directive 2000/14/CE.
- The procedure used for the conformity test is in agreement with attachment V of European Directive 2000/14/EC.
- Das angewandte Verfahren für die Konformitätskontrolle ist in Übereinstimmung mit Anlage V der Richtlinie 2000/14/EG.
- El control de conformidad se determina con arreglo al anexo V de la directiva 2000/14/CE.

10. Poggibonsi (SI), 05/05/2004

**IMER INTERNATIONAL S.p.A.**

DIRETTORE GENERALE - DIRECTEUR GENERAL - MANAGING DIRECTOR - GENERALDIREKTOR - DIRECTOR GENERAL

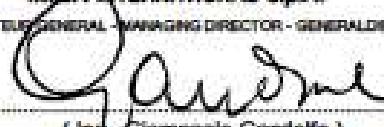

( Ing. Giampaolo Gondolfo )

**Macchina Tipo**

**MAT.N°**

### **AVVERTENZA IMPORTANTE**

Questo modulo deve essere compilato e timbrato ed il TAGLIANDO DI RICHIESTA GARANZIA consegnato al Rivenditore o spedito per Raccomandata al Servizio Assistenza IMER al momento dell'acquisto della macchina.

L'invio del tagliando di richiesta è condizione indispensabile perché la garanzia abbia corso e venga inviato all'utilizzatore il Certificato di Garanzia.

La soc. IMER si riserva di non riconoscere alcuna garanzia nel caso di mancato invio.

**DATA**

**TIMBRO DEL RIVENDITORE**

Tagliare e spedire al SERV.ASS. della IMER International o consegnare al Rivenditore



### **IMER International Spa** **Tagliando di richiesta del CERTIFICATO DI GARANZIA**

**Macchina Tipo**

**MAT.N°**

**NOME**

**COGNOME**

**INDIRIZZO**

**CAP**

Leggere le avvertenze di Sicurezza contenute nel Libretto di Manutenzione e Uso  
della Macchina e rendere il personale edotto prima del suo impiego



Data \_\_\_\_\_

Firma dell' acquirente \_\_\_\_\_

**TIMBRO DEL RIVENDITORE**

63038 PROGIBONSI (VI) - ITALY

Località:

IMER Immobilien S.p.A.

Spese Ditta



l'immagine, affatto di conseguenza, è considerata di scarsissima qualità e manuale dopo che l'apparizione in alto risulta a lista.

6) | collegamento effettuato non sono approvati secondo le norme di trasmissione causando danni al componente elettronico.  
6) | la preparazione dell'attrezzo in genere non permettono il periodo della garanzia.

6) | vengono impiegati componenti a lungo termine, in caso di cattivaia di peso dà un secondo o più problemi causati da bufera elettronica.

6) | prodotti venduti non vengono usati a meno di un anno dalla vendita, o per negligenza di uno dei partecipanti.

6) | prodotti venduti vengono mostrati, ripetuti, smontati o comunque manipolati a vantaggio degli stessi montatori attraverso la garanzia viene a essere violata.

6) | esiste insopportabile per diritti di prodotto manipolare a sovra prezzi, qualunque sia la causa.

6) | fabbricazione non sarà responsabile per gli eventuali danni a tutti conseguenziali all'uso della macchina od attrezzatura individuata ad esse.

6) | produzione di manutenzione preventiva degli strumenti di misurazione IBER, la garanzia non copre i danni causati da condizioni ambientali particolari non previste fra le antecedenti normali, seconde atmosfere, calore, umidità, elettricità.

6) | applicazione della garanzia è subordinata al rispetto delle norme di uso e manutenzione ed alle avvertenze indicate nella documentazione assoggettate presso la base alla parte produttore dell'ATTENZA.

6) | materiali tenuti disponibili domani stesso dal preventore presso il n. stabilimenti, treno deposito, a dopo preventore riceverà notificazione di manutenzione.

6) | selettore, la garanzia sul motivo individuato è assunta dal relatore telefonante.

Per la validità della garanzia occorre che venga restituito all'utente opportunitamente composta, l'etichetta modulo allegato al manuale di uso e

## CONDIZIONI DI GARANZIA

solo compilato e inviato a V.I. o altro di fabbricazione.  
IMER Immobilien S.p.A. garantisce alla acquirente l'acquisto di una macchina nuova, negata in ogni sua componente e che i materiali IBER



This is a contact addendum to our manuals

**Imer USA East**  
221 Westhampton Pl  
Capitol Heights, MD 20743  
Phone: 301-336-3700  
Fax: 301-336-6687  
Order Fax: 301-336-5811

**Imer USA West**  
3654 Enterprise Ave  
Hayward, CA 94545

**800-275-5463**